

There are instructions for disassembling the camera on the product description.

There are 4 small grooves in the gap of the black baffle. Use a screw to pry open carefully, then use a screwdriver to open the 4 screws inside

The reset button can be found.

Method of operation.

1. The camera is powered off.
2. Press and hold the reset button
3. Power the camera, (Reset button must be kept pressed.)

A reset sound will be heard after about 30 seconds.

