



# **DS-K270XX Series Access Controller**

**User Manual**

## Legal Information

### About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website ( <https://www.hikvision.com> ). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

### About this Product

- This product can only enjoy the after-sales service support in the country or region where the purchase is made.
- If the product you choose is a video product, please scan the following QR code to obtain the "Initiatives on the Use of Video Products", and read it carefully.



### Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

### LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR

IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

### **Data Protection**

- To protect data, the development of Hikvision Products incorporates privacy by design principles. For example, for Products with facial recognition features, biometrics data is stored in your Products with encryption method; for fingerprint Products, only fingerprint template will be saved, which is impossible to reconstruct a fingerprint image.
- As a data controller/processor, you may process personal data, including collection, storage, use, processing, disclosure, deletion, etc. You are advised to pay attention to and comply with applicable laws and regulations related to the protection of personal data, including without limitation, conducting security controls to safeguard personal data, such as, implementing reasonable administrative and physical security controls, conduct periodic reviews and the assessments of the effectiveness of your security controls.

**© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.**

## Available Model

Product Name	Model
Access Controller	DS-K2701X Series Access Controller
	DS-K2702X Series Access Controller
	DS-K2702WX-E1 Series Access Controller
	DS-K2704X Series Access Controller
	DS-K2708X Series Access Controller
Access Module	DS-K2M002X Access Module

## Regulatory Information

### FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

#### FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

### EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed

under the EMC Directive 2014/30/EU, RE Directive 2014/53/EU, the RoHS Directive 2011/65/EU



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: [www.recyclethis.info](http://www.recyclethis.info)



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: [www.recyclethis.info](http://www.recyclethis.info)

### Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (B)/NMB-3(B) standards requirements.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

## Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into Dangers and Cautions:

**Dangers:** Neglecting any of the warnings may cause serious injury or death.

**Cautions:** Neglecting any of the cautions may cause injury or equipment damage.

	
<b>Dangers:</b> Follow these safeguards to prevent serious injury or death.	<b>Cautions:</b> Follow these precautions to prevent potential injury or material damage.

 **Danger:**

- All the electronic operation should be strictly compliance with the electrical safety regulations, fire prevention regulations and other related regulations in your local region.
- Please use the power adapter, which is provided by normal company. The power consumption cannot be less than the required value.
- Do not connect several devices to one power adapter as adapter overload may cause over-heat or fire hazard.
- Please make sure that the power has been disconnected before you wire, install or dismantle the device.
- When the product is installed on wall or ceiling, the device shall be firmly fixed.
- If smoke, odors or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.
- Do not ingest battery, Chemical Burn Hazard.  
This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.  
Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the device yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)

### **Cautions:**

- Do not drop the device or subject it to physical shock, and do not expose it to high electromagnetism radiation. Avoid the equipment installation on vibrations surface or places subject to shock (ignorance can cause equipment damage).
- Do not place the device in extremely hot (refer to the specification of the device for the detailed operating temperature), cold, dusty or damp locations, and do not expose it to high electromagnetic radiation.
- The device cover for indoor use shall be kept from rain and moisture.
- Exposing the equipment to direct sun light, low ventilation or heat source such as heater or radiator is forbidden (ignorance can cause fire danger).
- Do not aim the device at the sun or extra bright places. A blooming or smear may occur otherwise (which is not a malfunction however), and affecting the endurance of sensor at the same time.
- Please use the provided glove when open up the device cover, avoid direct contact with the device cover, because the acidic sweat of the fingers may erode the surface coating of the device cover.
- Please use a soft and dry cloth when clean inside and outside surfaces of the device cover, do not use alkaline detergents.
- Please keep all wrappers after unpack them for future use. In case of any failure occurred, you need to return the device to the factory with the original wrapper. Transportation without the original wrapper may result in damage on the device and lead to additional costs.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.

# Contents

<b>Chapter 1 Appearance</b> .....	<b>1</b>
1.1 Appearance and Interfaces of 1-Door/2-Door/4-Door/8-Door Access Controller .....	1
1.2 Access Module Appearance .....	5
1.3 Indicator Description .....	6
<b>Chapter 2 Terminal Wiring</b> .....	<b>8</b>
2.1 Wiring Description .....	8
2.2 Wiegand Card Reader Wiring .....	11
2.3 RS-485 Card Reader Wiring .....	12
2.4 Door Lock Wiring .....	13
2.5 Alarm Wiring .....	13
2.6 Exit Button Wiring .....	13
2.7 Door Contact Wiring .....	14
2.8 Fire Alarm Module Wiring .....	14
<b>Chapter 3 Installation</b> .....	<b>16</b>
3.1 Install Elevator Controller .....	16
3.2 Install Elevator Controller(With Chassis) .....	18
<b>Chapter 4 Settings</b> .....	<b>20</b>
<b>Chapter 5 Activation</b> .....	<b>21</b>
5.1 Activate via Web Browser .....	21
5.2 Activate via SADP .....	22
<b>Chapter 6 Typical Application</b> .....	<b>24</b>
<b>Chapter 7 Quick Operation via Web Browser</b> .....	<b>25</b>
7.1 Set Security Question .....	25
7.2 Select Language .....	25
7.3 Time Settings .....	25
<b>Chapter 8 Operation via Web Browser</b> .....	<b>27</b>

8.1 Login .....	27
8.2 Forget Password .....	27
8.3 Module Description .....	27
8.4 Access Control Management .....	28
8.4.1 Overview .....	28
8.4.2 Search Event .....	29
8.4.3 Access Point Management .....	29
8.4.4 Permission Management .....	33
8.4.5 Access Control Application .....	37
8.5 Person Management .....	46
8.5.1 Add Organization .....	46
8.5.2 Add Person .....	46
8.6 Device Management .....	49
8.6.1 Search Not Added Device .....	49
8.6.2 Add Access Module .....	49
8.6.3 Add IO Module .....	52
8.6.4 Area Management .....	53
8.7 System and Maintenance .....	53
8.7.1 View Device Information .....	53
8.7.2 Set Time .....	54
8.7.3 Set DST .....	54
8.7.4 Change Administrator's Password .....	54
8.7.5 Account Security Settings .....	55
8.7.6 View Online User .....	55
8.7.7 View Open Source Software License on PC Web .....	55
8.7.8 View Device Arming/Disarming Information .....	55
8.7.9 Network Settings .....	56
8.7.10 Event Settings .....	60

8.7.11 Access Configuration .....	62
8.7.12 Card Settings .....	65
8.7.13 Maintenance and Security .....	66
8.7.14 Certificate Management .....	70
8.7.15 Unlock .....	71
<b>Chapter 9 Configure the Device via the Mobile Web .....</b>	<b>73</b>
9.1 Login .....	73
9.2 Overview .....	73
9.3 Forget Password .....	74
9.4 Configuration .....	74
9.4.1 View Device Information .....	74
9.4.2 Time Settings .....	74
9.4.3 Set DST .....	75
9.4.4 User Management .....	75
9.4.5 Network Settings .....	76
9.4.6 Alarm Settings .....	80
9.4.7 Access Configuration .....	80
9.4.8 Organization And Person Management .....	82
9.4.9 Device Management .....	83
9.4.10 Access Control Settings .....	86
9.4.11 Event Search .....	90
9.4.12 Upgrade and Maintenance .....	90
9.4.13 View User Manual .....	91
9.4.14 View Open Source Software License .....	91
<b>Chapter 10 Other Platforms to Configure .....</b>	<b>92</b>
<b>Appendix A. Dimension .....</b>	<b>93</b>

## Chapter 1 Appearance

### 1.1 Appearance and Interfaces of 1-Door/2-Door/4-Door/8-Door Access Controller

The appearance and interfaces of 1-door/2-door/4-door/8-door access controller are as follows.

#### Appearance and Interfaces of 1-Door Access Controller

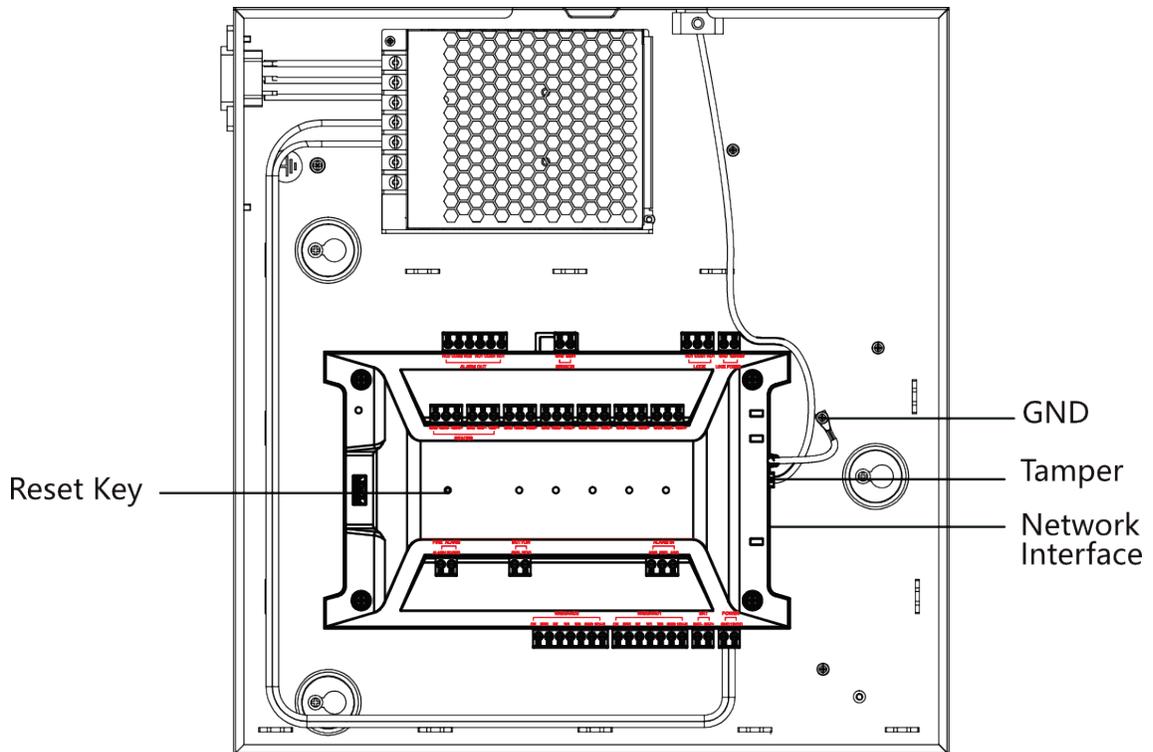


Figure 1-1 Appearance and Interfaces of 1-Door Access Controller

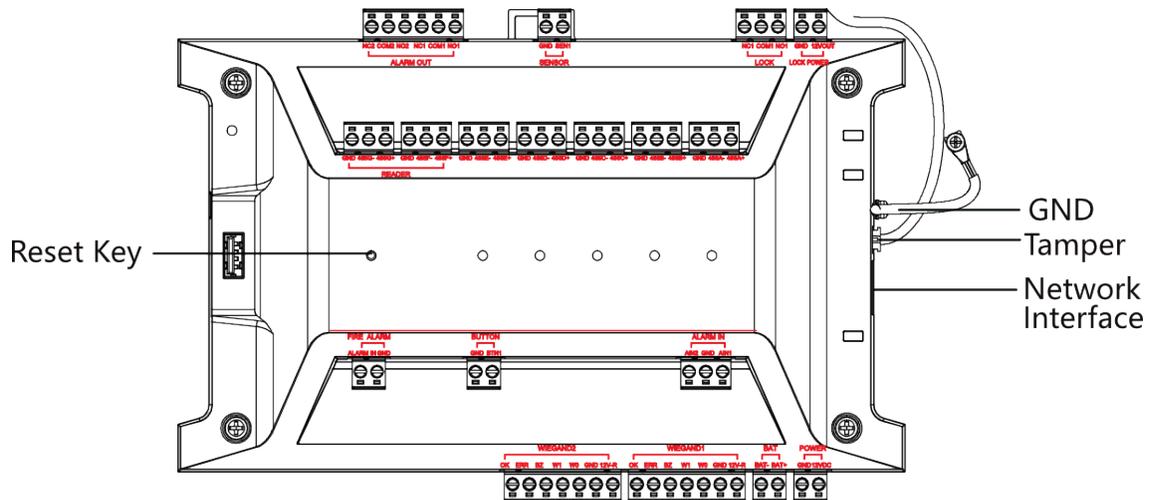


Figure 1-2 Appearance and Interfaces of 1-Door Access Controller Main Board

## Appearance and Interfaces of 2-Door Access Controller

### Note

- Only partial models support Wi-Fi and POE function.
  - PoE model devices need to be aware of the following:
    1. The switch specification is 30 W.
    2. PoE and Wi-Fi function cannot be used at the same time.
    3. If the total power of the incoming locks exceeds 10 W, an additional separate power supply is required for one of the locks.
    4. Supports access to up to 4 card readers.
-



## Appearance and Interfaces of 4-Door Access Controller

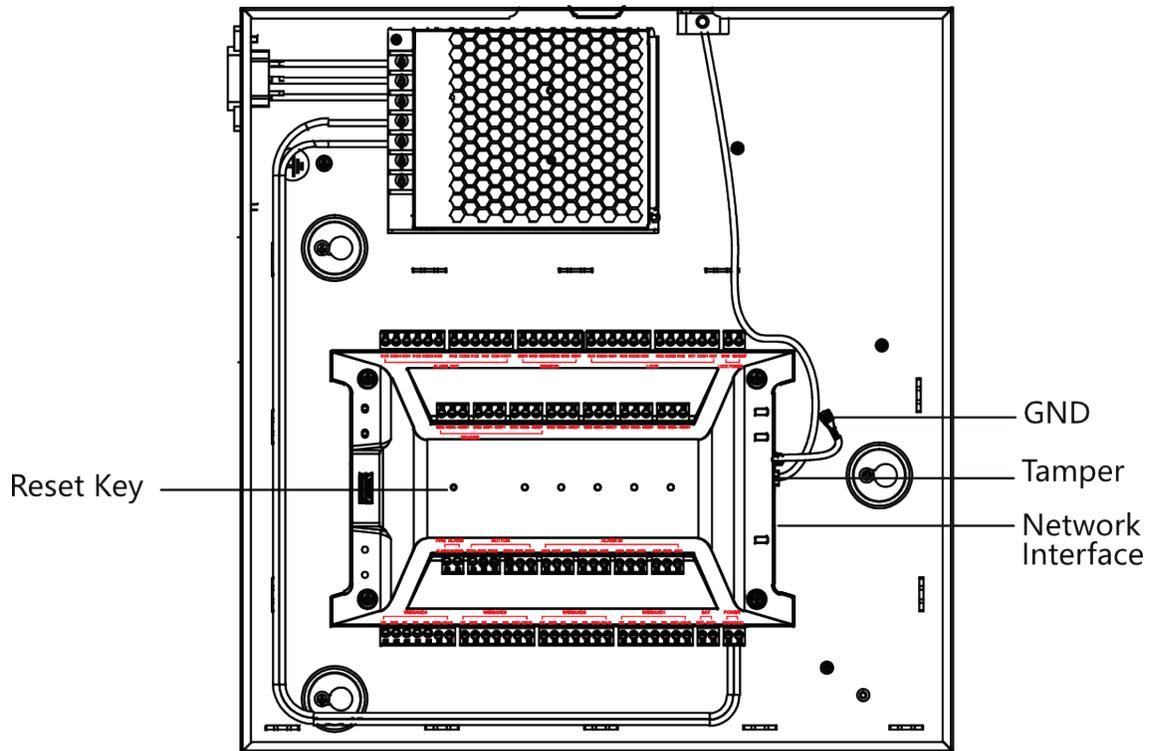


Figure 1-5 Appearance and Interfaces of 4-Door Access Controller

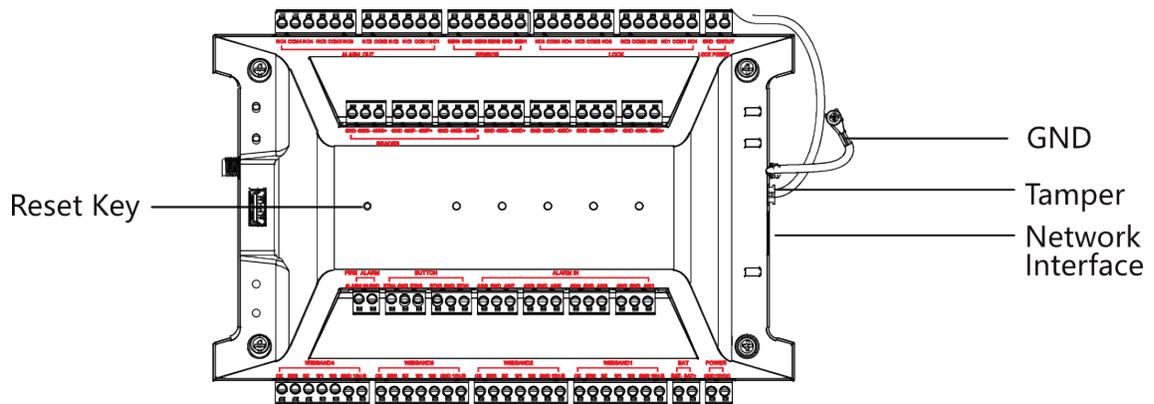


Figure 1-6 Appearance and Interfaces of 4-Door Access Controller Main Board

## Appearance and Interfaces of 8-Door Access Controller

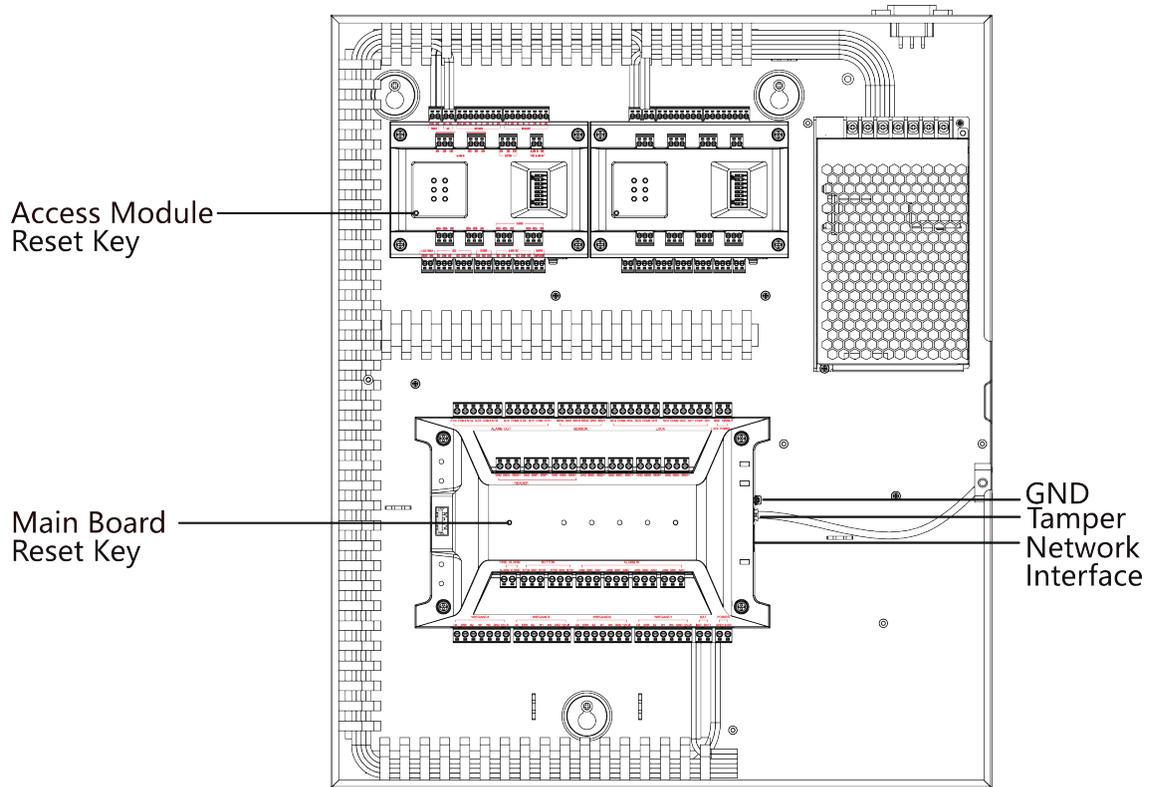


Figure 1-7 Appearance and Interfaces of 8-Door Access Controller

### 1.2 Access Module Appearance

View the access module appearance.

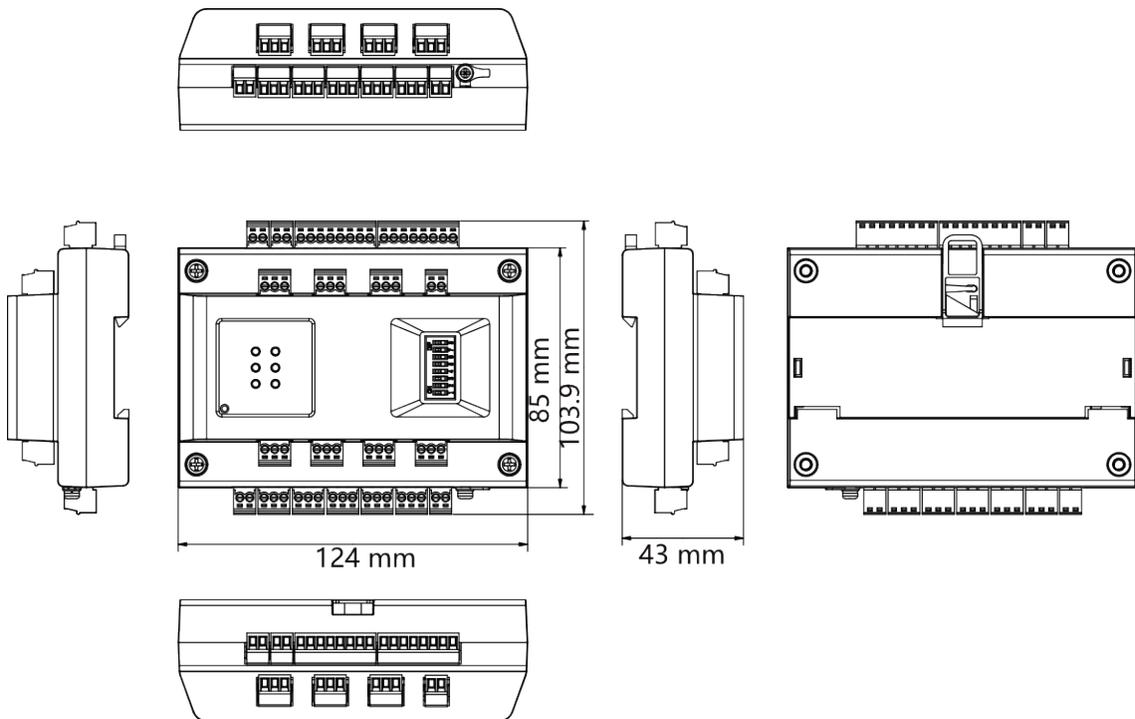


Figure 1-8 Access Module Appearance

### 1.3 Indicator Description

The indicator description of 1-door/2-door/4-door/8-door access controller and access module is as follows.

Device Name	Description
1-Door Access Controller	There are a total of 9 indicators: a power supply indicator, a working status indicator, a network indicator, a door status and 5 RS-485 status indicators.
2-Door Access Controller	There are a total of 11 indicators: a power supply indicator, a working status indicator, a network indicator, a Wi-Fi indicator, 5 RS-485 status indicators and 2 door status indicators.

	 <b>Note</b> Some models do not support Wi-Fi indicators.
4-Door Access Controller	There are a total of 12 indicators: a power supply indicator, a working status indicator, a network indicator, 5 RS-485 status indicators and 4 door status indicators.
8-Door Access Controller	<p>Access Controller: There are a total of 12 indicators: a power supply indicator, a working status indicator, a network indicator, 5 RS-485 status indicators and 4 door status indicators.</p> <p>Access module: There are a total of 6 indicators: a power supply indicator, a working status indicator, 2 communication status indicators, and 2 door status indicators.</p>
Access Module	There are a total of 6 indicators: a power supply indicator, a working status indicator, 2 communication status indicators, and 2 door status indicators.

 **Note**

When the working status indicator is red, it means that the device is powered on; When the working status indicator is flashing green, it means that the device is added to the platform. When the door status indicator is on, it means that the door is open, and the light is off means that the door is closed. When the other status indicators are on, it means connecting, and the light off means that it is not connected.

## Chapter 2 Terminal Wiring

Terminal Wiring Description of the Access Controller.

### 2.1 Wiring Description

The wiring of 1-door/2-door/4-door/8-door access controller are as follows.


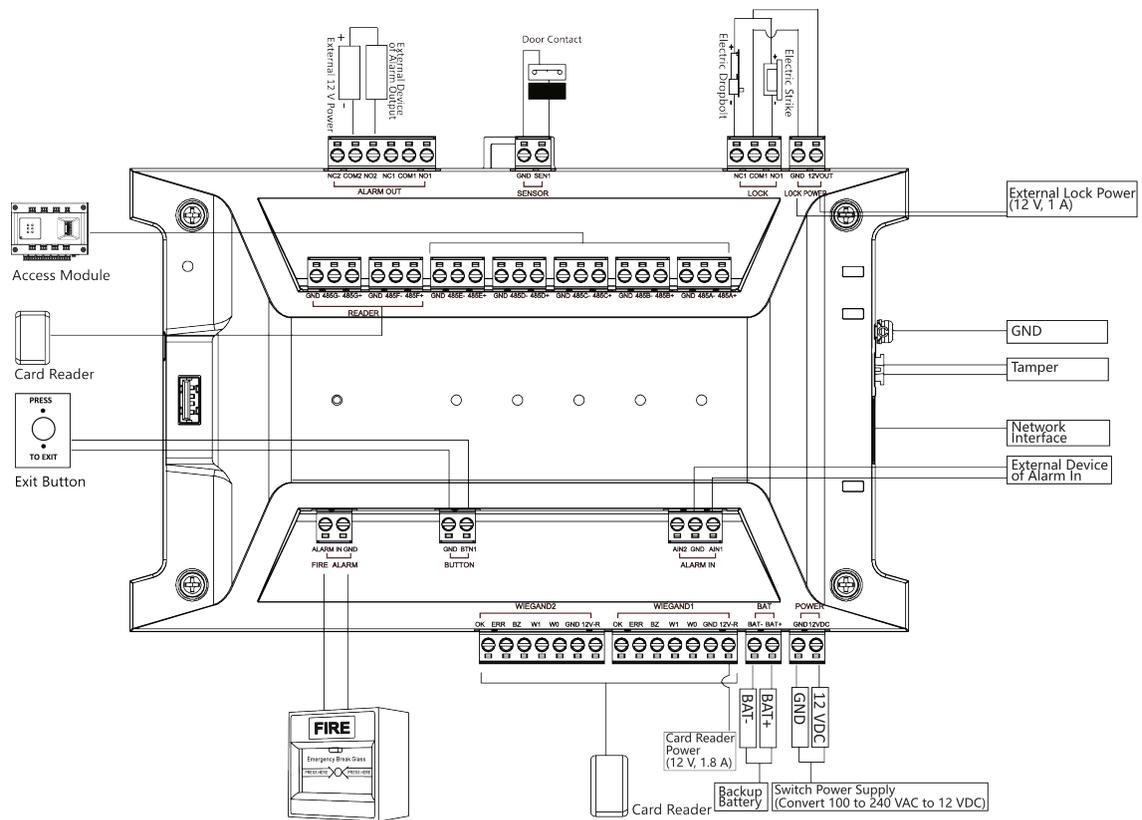



Figure 2-1 The Wiring of 1-Door Access Controller

# DS-K270XX Series Access Controller User Manual

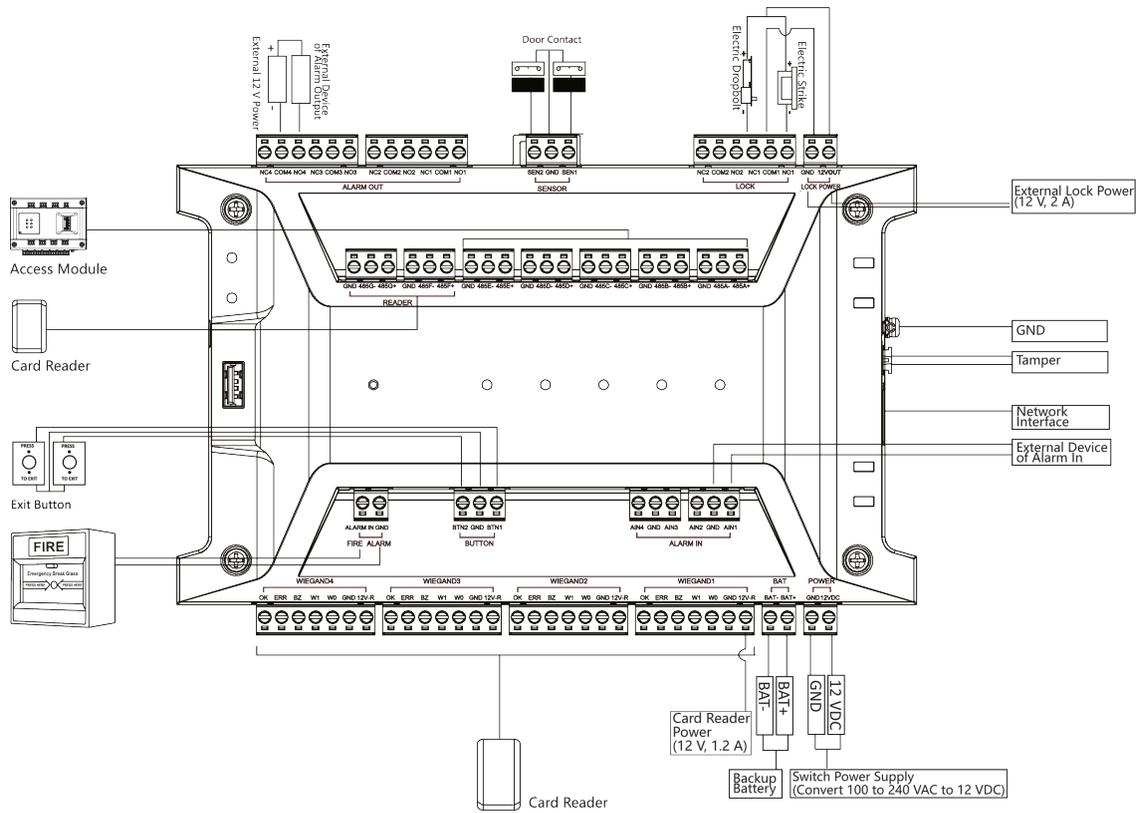

**Figure 2-2 The Wiring of 2-Door Access Controller**

# DS-K270XX Series Access Controller User Manual

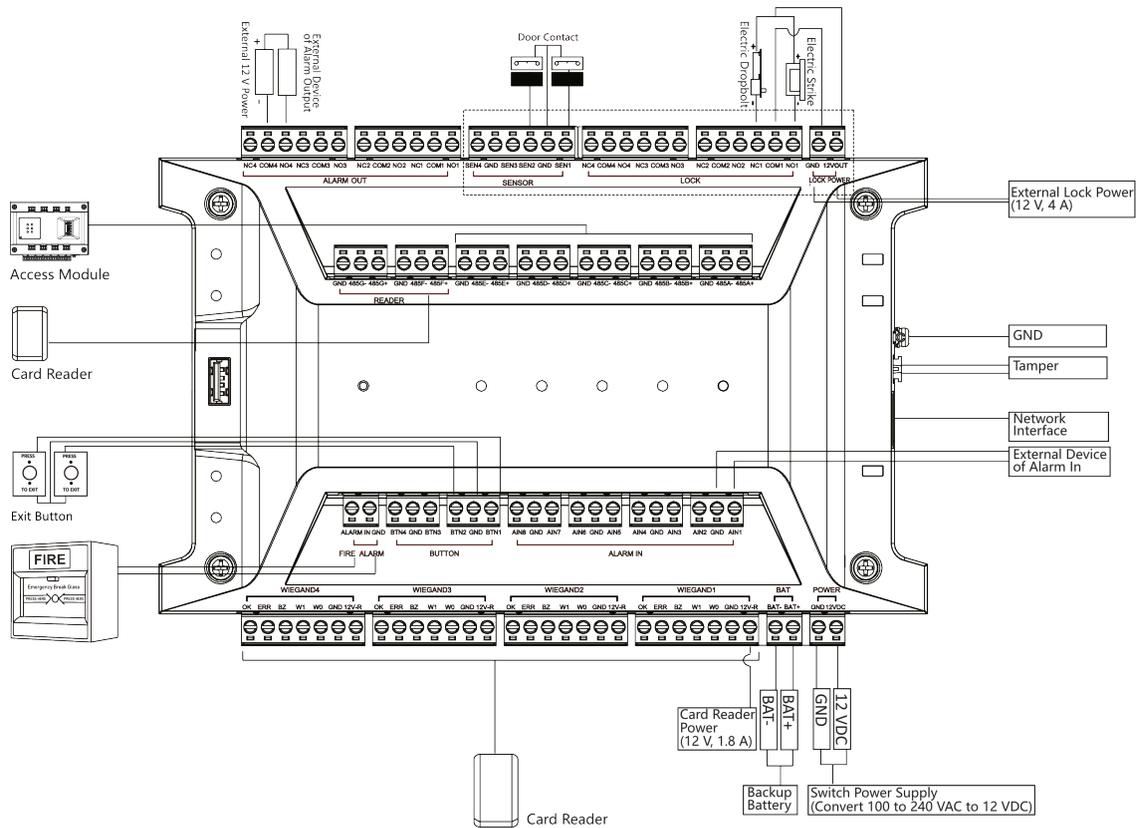

**Figure 2-3 The Wiring of 4-Door Access Controller**

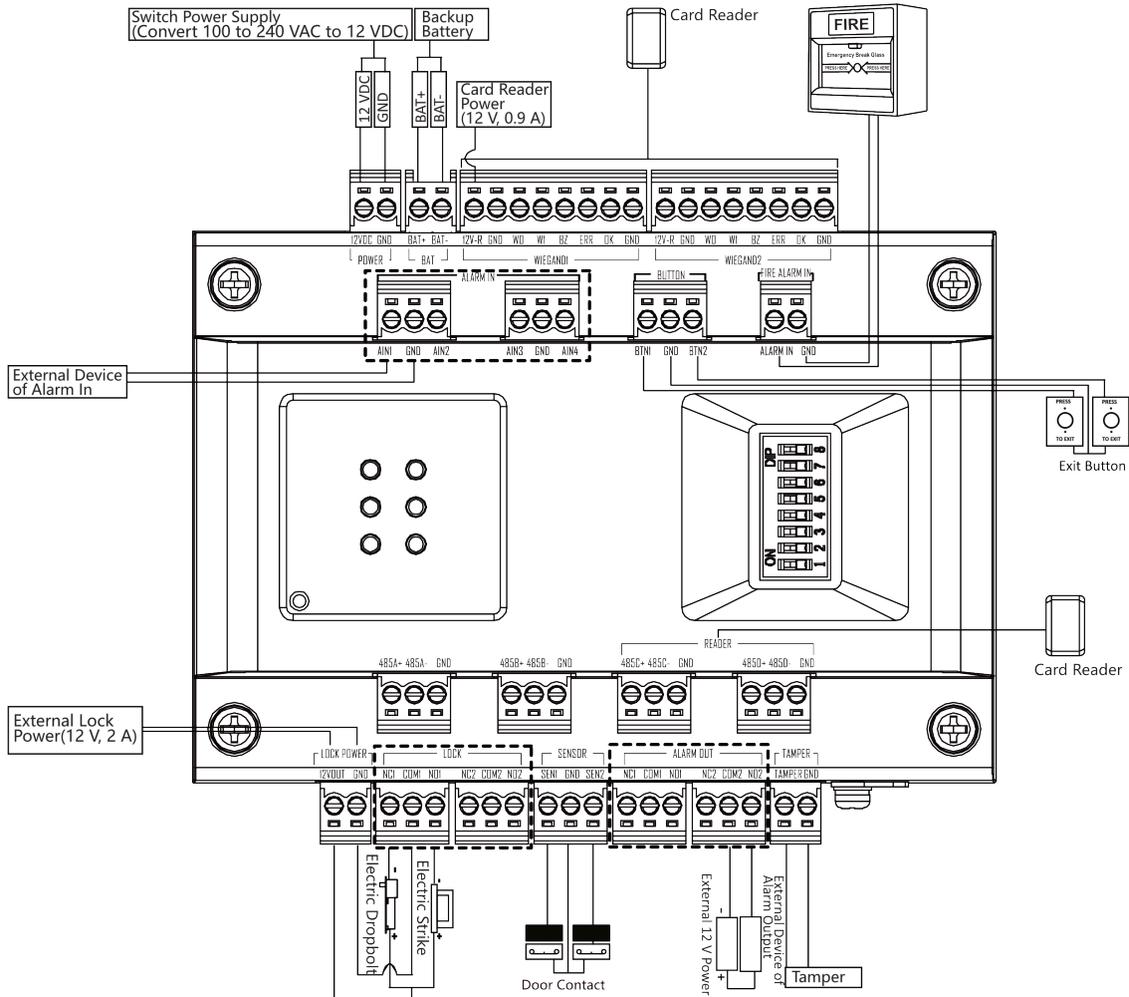


Figure 2-4 The Wiring of Access Module

## 2.2 Wiegand Card Reader Wiring

You can view the Wiegand card reader wiring diagram.

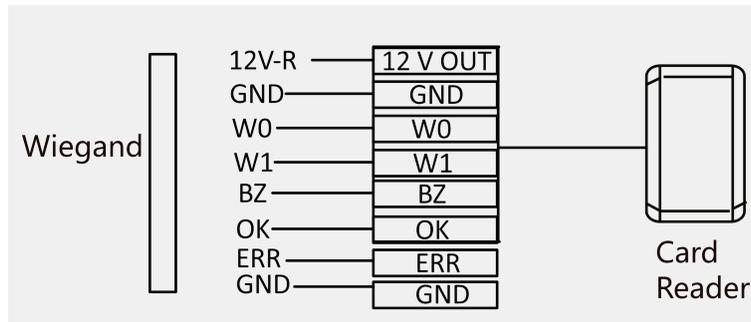


Figure 2-5 Wiegand Card Reader Wiring Diagram

**Note**

You must connect the OK/ERR/BZ, if using access controller to control the LED and buzzer of the Wiegand card reader.

### 2.3 RS-485 Card Reader Wiring

You can view the RS-485 card reader wiring diagram.

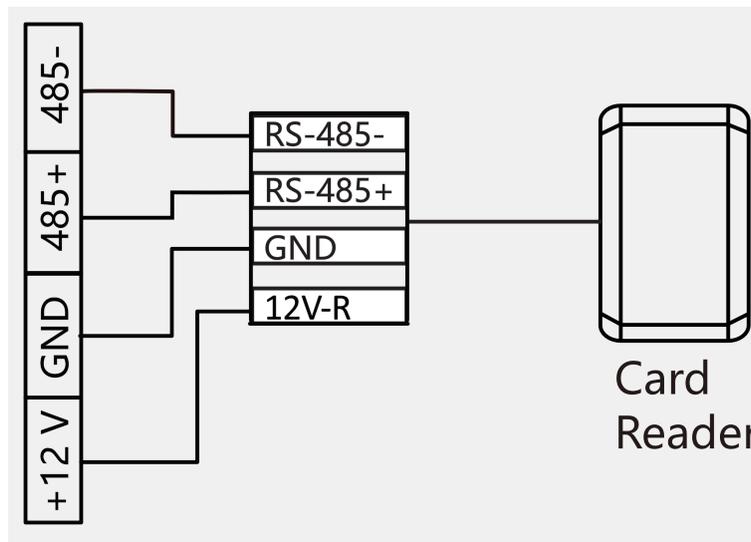


Figure 2-6 RS-485 Card Reader Wiring Diagram

**Note**

- If the card reader is installed too far away from the access controller, you can use an external power supply.
- It is recommended to use hand-in-hand wiring to connect the RS-485 card reader.

## 2.4 Door Lock Wiring

You can view the door lock wiring diagram.

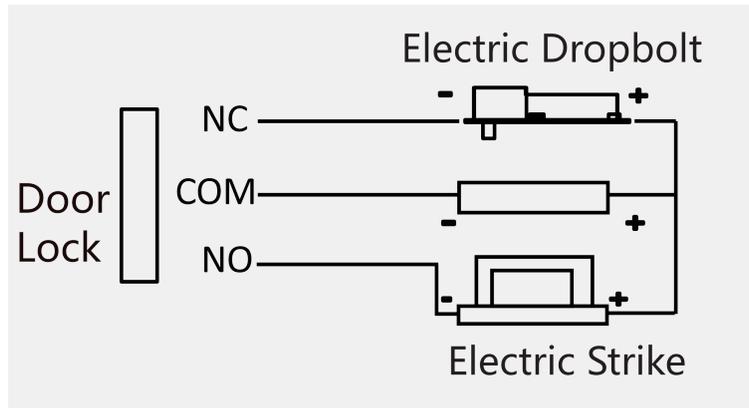


Figure 2-7 Wiring Diagram of Door Lock

## 2.5 Alarm Wiring

You can view the alarm wiring diagram.

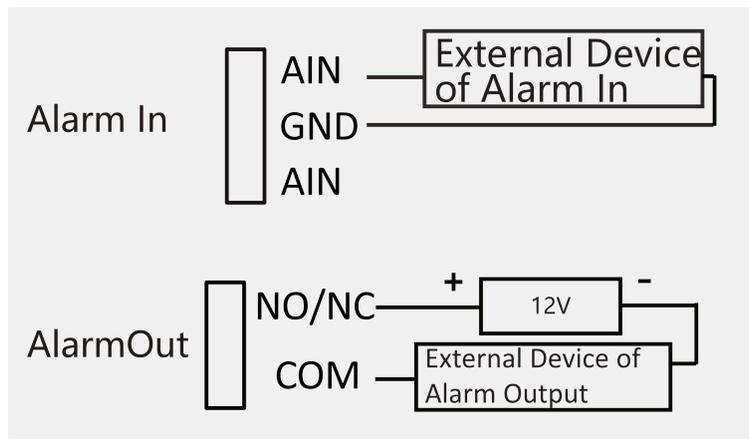


Figure 2-8 Alarm Wiring

## 2.6 Exit Button Wiring

You can view the exit button wiring diagram

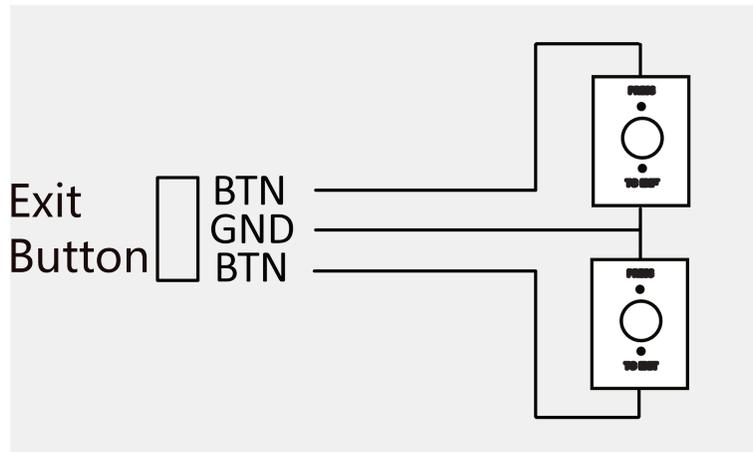


Figure 2-9 Exit Button Wiring

## 2.7 Door Contact Wiring

You can view the door contact wiring diagram.

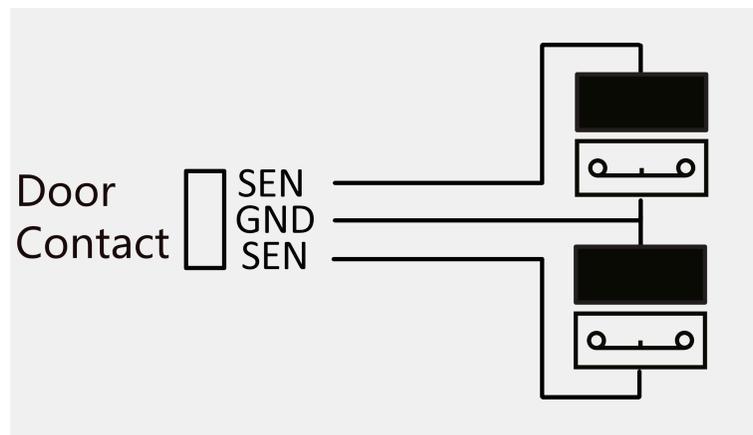


Figure 2-10 Door Contact Wiring

## 2.8 Fire Alarm Module Wiring

You can view the fire alarm module wiring diagram.



**Figure 2-11 Fire Alarm Module Wiring**

## Chapter 3 Installation

### 3.1 Install Elevator Controller

#### Steps


---

#### Note

The minimum bearing weight of the wall or other places should be 3 times heavier than the device weight.


---

1. Drill holes on the wall or other places according to the holes on the guide rail.

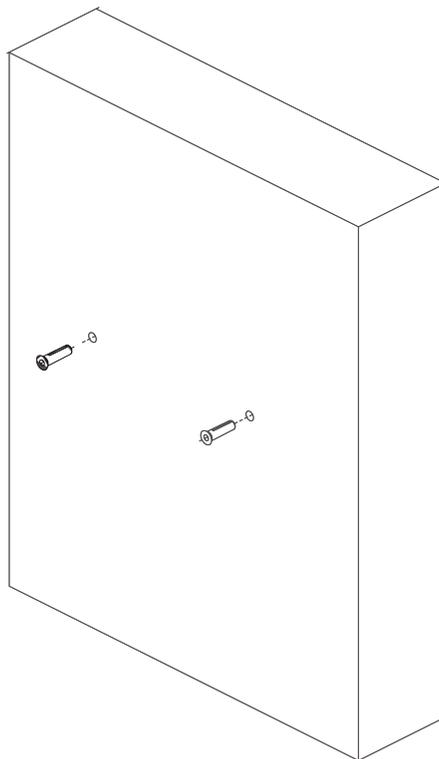

**Figure 3-1 Drill Hole**

2. Insert the screw sockets of the set screws (supplied) in the drilled holes.

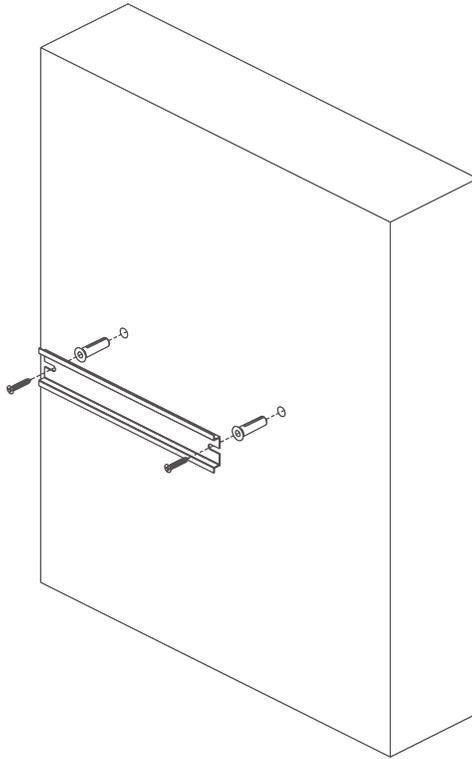

**Figure 3-2 Insert Sockets**

- 3.** Push the device to the guide rail and complete the installation.

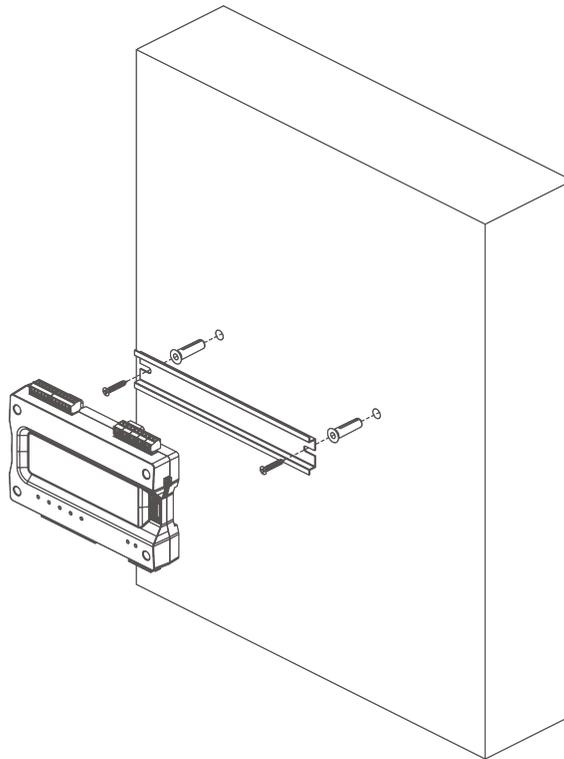


Figure 3-3 Fix Device

## 3.2 Install Elevator Controller(With Chassis)

### Steps


---

#### Note

The minimum bearing weight of the wall or other places should be 3 times heavier than the device weight.

---

1. Make holes in the wall according to the screw holes of the chassis, and insert the sleeve of the expansion screws included in the package into the screw holes.
2. Use the expansion screws included in the package to align the sleeve position, fix the chassis on the mounting position, and complete the installation.

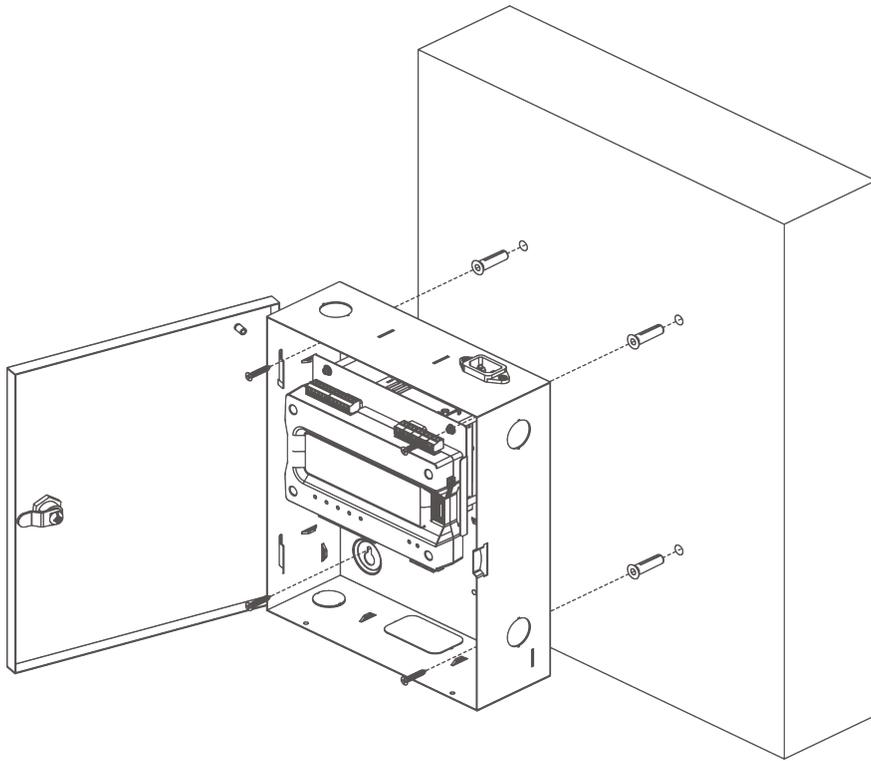

**Figure 3-4 Install Device**

## Chapter 4 Settings

### Hardware Initialization

Hold the restore button for 5s to initialize the hardware.

### Fire Relay NO/NC

The position of the fire jumper cap position and the related NO/NC status are as follows:

#### Note

This operation requires disassembling the upper and lower shells of the device, which is recommended by a professional.

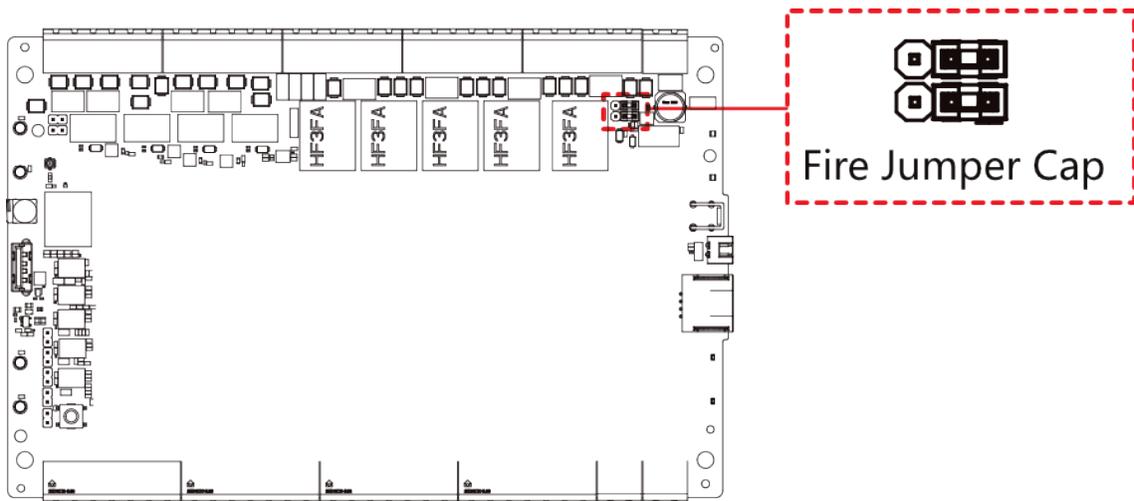
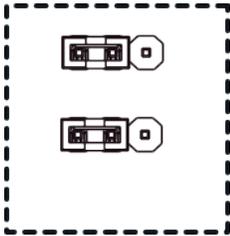
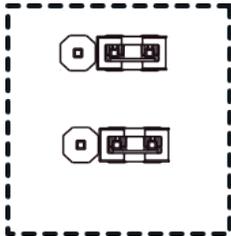


Figure 4-1 Fire Jumper Cap Position Description

Normally Closed Status	Normally Open Status
	

## Chapter 5 Activation

You should activate the device before the first login. After powering on the device, the system will switch to Device Activation page.

Activation via the device, SADP tool and the client software are supported.

The default values of the device are as follows:

- The default IP address: 192.0.0.64
- The default port No.: 8000
- The default user name: admin

### 5.1 Activate via Web Browser

You can activate the device via the web browser.

#### Steps

1. Enter the device default IP address (192.0.0.64) in the address bar of the web browser, and press **Enter**.



#### Note

Make sure the device IP address and the computer's should be in the same IP segment.

2. Create a new password (admin password) and confirm the password.



#### Caution

- The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.
- Proper configuration of all passwords and other security settings is the responsibility of the service provider and/or end-user.
- Do not contain following characters in the password: the user name, 123, admin (case-insensitive), 4 or more continuously increasing or decreasing digits, or 4 or more consecutively repeated characters.
- Password cannot contain words such as hik, hkws, and hikvision (case insensitive).

3. Click **Activate**.

4. Edit the device IP address. You can edit the IP address via the SADP tool, the device, and the client software.

## 5.2 Activate via SADP

SADP is a tool to detect, activate and modify the IP address of the device over the LAN.

### Before You Start

- Get the SADP software from the supplied disk or the official website <http://www.hikvision.com/en/>, and install the SADP according to the prompts.
- The device and the PC that runs the SADP tool should be within the same subnet.

The following steps show how to activate a device and modify its IP address. For batch activation and IP addresses modification, refer to *User Manual of SADP* for details.

### Steps

1. Run the SADP software and search the online devices.
2. Find and select your device in online device list.
3. Input new password (admin password) and confirm the password.



### Caution

**STRONG PASSWORD RECOMMENDED**-We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

---




### Note

Characters containing admin and nimda are not supported to be set as activation password.

---

4. Click **Activate** to start activation.

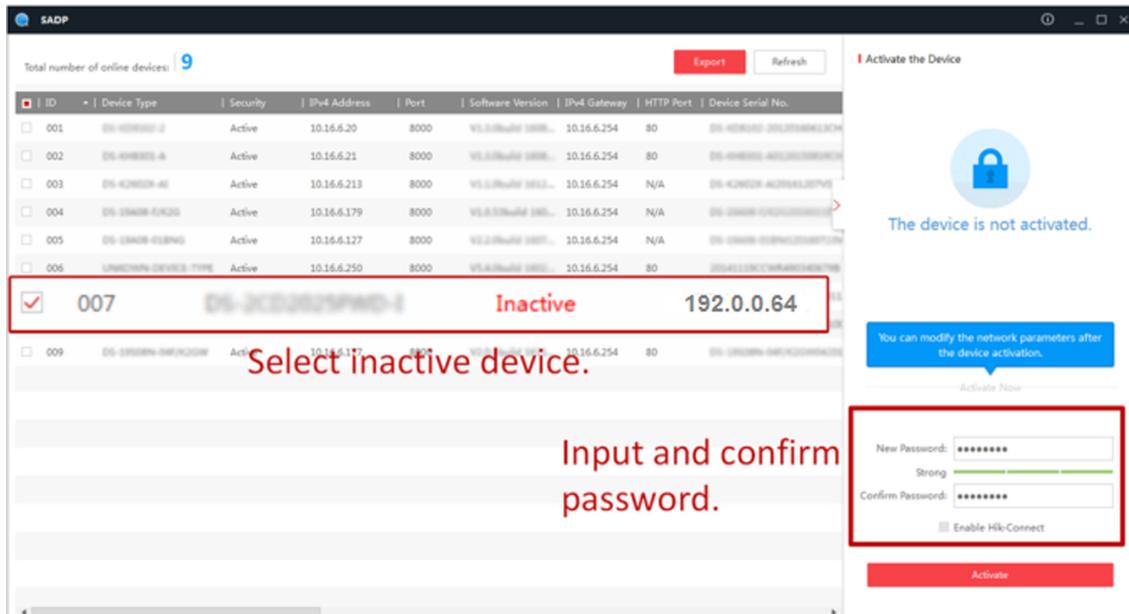

Status of the device becomes **Active** after successful activation.

5. Modify IP address of the device.

- 1) Select the device.
- 2) Change the device IP address to the same subnet as your computer by either modifying the IP address manually or checking **Enable DHCP**.
- 3) Input the admin password and click **Modify** to activate your IP address modification.

## Chapter 6 Typical Application

The typical application for access controller, access module, lock and platform is as follows.

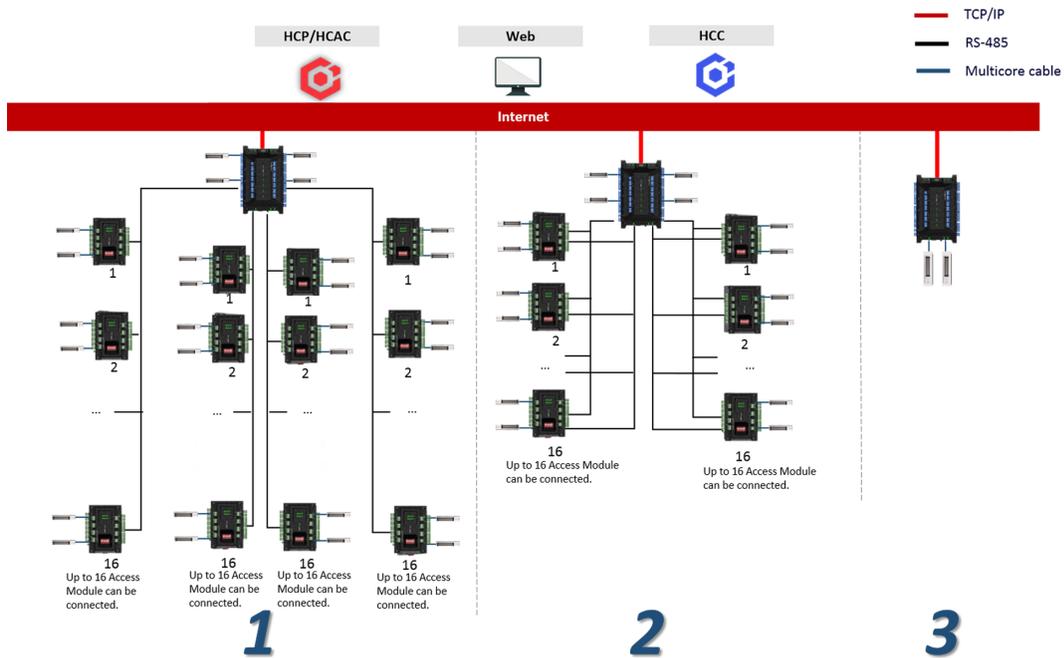


Figure 6-1 Typical Application

1	<p>No RS-485 redundant protection max. 128 doors.</p> <p><b>Note</b> The DS-K2704X series support up to 128 doors; K2702X series support up to 126 doors; K2701x series support up to 125 doors.</p>
2	<p>With RS-485 redundant protection max. 64 doors.</p>
3	<p>Max. 4 doors.</p>

## Chapter 7 Quick Operation via Web Browser

### 7.1 Set Security Question

If you forget the device activation password, you can change the password via security questions and E-mail. Set the security questions before configuration.

Click  in the top right of the web page to enter the **Change Password** page.

#### Security Question Verification

Answer the security questions.

#### E-mail Verification

1. Export the QR code and send it to *pw\_recovery@hikvision.com* as attachment.
2. You will receive a verification code within 5 minutes in your reserved email.
3. Enter the verification code into the verification code field to verify your identification.

click **Next**. Or you can click **Skip** to skip the step.

### 7.2 Select Language

You can select a language for the device system.

Click  in the top right of the web page to enter the **Device Language Settings** page. You can select a language for the device system from the drop-down list.

By default, the system language is English.



After you change the system language, the device will reboot automatically.

---

### 7.3 Time Settings

Click  in the top right of the web page to enter the wizard page.

#### Time Zone

Select the device located time zone from the drop-down list.

#### Time Sync.

##### NTP

You should set the NTP server's IP address, port No., and interval.

##### Manual

By default, the device time should be synchronized manually. You can set the device time manually or check **Sync. with Computer Time** to synchronize the device time with the computer's time.

### **Server Address/NTP Port/Interval**

You can set the server address, NTP port, and interval.

### **DST**

You can view the DST start time, end time and bias time.

## Chapter 8 Operation via Web Browser

### 8.1 Login

You can login via the web browser or the remote configuration of the client software.

---

#### Note

- Make sure the device is activated. For detailed information about activation, see Activation Chapter.
  - It is recommended to log in through the Chrome browser.
- 

#### Login via Web Browser

Enter the device IP address in the address bar of the web browser and press **Enter** to enter the login page.

Enter the device user name and the password. Click **Login**.

#### Login via Remote Configuration of Client Software

Download and open the client software. After adding the device, click  to enter the Configuration page.

### 8.2 Forget Password

If you forget the password when logging in, you can change the password by email address or security questions.

On the login page, click **Forget Password**.

Select **Verification Mode**.

#### Security Question Verification

Answer the security questions.

#### E-mail Verification

1. Export the QR code and send it to [pw\\_recovery@hikvision.com](mailto:pw_recovery@hikvision.com) as attachment.
2. You will receive a verification code within 5 minutes in your reserved email.
3. Enter the verification code into the verification code field to verify your identification.


Click **Next**, create a new password and confirm it.

### 8.3 Module Description

You can set Person management, device management, access control, system and maintenance parameters.

Click  on the right side to open the module description page and view the description of each module. Click each hyperlink to jump to the corresponding settings page.

Configuration process is as follows:

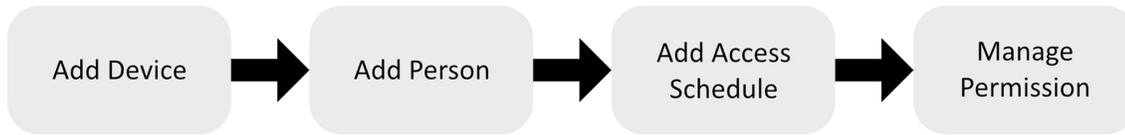

## 8.4 Access Control Management

### 8.4.1 Overview

You can select the area and control the door status, view the device status, view the event, view the alarm data, view the person information, network status, basic information, and device capacity. You can also enter the page from quick start part.

Login the web browser and enter the **Access Control → Overview** .

#### Door Status

Click **View More** to view and control all doors' status.



Set the door status as unlock, closed, remain open, or remain closed.

#### Quick Start

Click **Add Person**, **Add Device**, **System Settings**, or **System and Maintenance** on the upper-right of the page to quick enter the page to configure parameters.

#### Event

You can view the event Employee ID, Name, Card No., Event Type, Time, and Operation.

You can also click **View More** to enter the search conditions, including the event type, employee ID, the name, the card No., the start time, and the end time, and click **Search**. The results will be displayed on the right panel.

#### Alarm Data

You can view the alarm data.

#### Device Status

View the other linked devices' status.

#### Person Information

View the person number, card number, fingerprint No.

#### Network Status

You can view the connected and registered status of wired network, wireless network, ISUP and cloud service.

## Basic Information

You can view the model, serial No. and firmware version.

## Device Capacity

You can view the person, card, fingerprint, and event capacity.

## 8.4.2 Search Event

Click **Access Control** → **Event Search** to enter the Search page.

Enter the search conditions, including the event type, the employee ID, the name, the card No., the start time, and the end time, and click **Search**.



### Note

The searched name should be up to 32 bits.

---

The results will be displayed on the right panel.

## 8.4.3 Access Point Management

Click **Access Control** → **Access Point Management**, you can view the doors associated with the access controller and the card readers associated with the doors.

Hover the mouse over the door or card reader on the right side of the interface, and you can click to configure the door parameters and the card reader authentication parameters.

## Set Door Parameters

Set the door parameters.

You can enter the door parameters page from the following 2 methods:

1. Click **Access Control** → **Access Point Management** . Hover the mouse on the door and click  to enter the door parameters page.
2. Click **Access Control** → **Parameter Settings** → **Door Parameters** .

Click **Save** to save the settings after the configuration. Click **Copy to** to copy the door's parameters to other doors.

The screenshot shows a configuration page for a door. At the top, the 'Online Status' is 'Online' with a green checkmark and a 'Refresh' link. Below this are several input fields and controls:

- Door Name:** A text input field containing 'Access Point 1'.
- Area:** A dropdown menu with 'Default Area' selected.
- Open Duration:** A numeric input field with '5' and a unit selector set to 's'.
- Door Open Timeout Alarm:** A numeric input field with '30' and a unit selector set to 's'.
- Remind Before Locking Door:** A toggle switch that is currently turned off.
- Passing Detection:** A toggle switch that is currently turned off.
- Lock Door when Door Closed:** A toggle switch that is currently turned on (green).
- Door Lock Status:** Radio buttons for 'Remain Closed' (selected) and 'Remain Open'.
- Exit Button Type:** Radio buttons for 'Remain Closed' and 'Remain Open' (selected).
- Extended Open Duration:** A numeric input field with '15' and a unit selector set to 's'.
- Door Remain Open Duration wi...:** A numeric input field with '10' and a unit selector set to 'min'.
- Duress Code:** An empty text input field.
- Super Password:** An empty text input field.
- Dismiss Code:** An empty text input field.

At the bottom of the form are two buttons: a red 'Save' button and a white 'Copy To' button.

**Figure 8-1 Set Door Parameters**

## Door Name

You can create a name for the door.

## Area

Select an added area or click **Add Area** to add a new area for the door.

## Open Duration

Set the door unlocking duration. If the door is not opened for the set time, the door will be locked.

## Remind Before Locking Door

Remind by the buzzing of card reader, and light may flash to remind.

## Passing Detection

If the function is enabled and door is not pushed open within unlocking duration, the event will be recorded as Passing Allowed (Door Not Used).

## Lock Door when Door Closed

Refers to the door status when door lock is powered on. If door lock is not cathode lock, select Remain Closed. Otherwise, select Remain Open.

### Door Open Timeout Alarm

An alarm will be triggered if the door has not been closed within the configured time duration.

### Door Lock Status

You can set the door lock status as **Remain Open** or **Remain Closed** according to your actual needs. By default, it is **Remain Closed**.

### Exit Button Type

You can set the exit button as **Remain Open** or **Remain Closed** according to your actual needs. By default, it is **Remain Open**.

### Extended Open Duration

The door contact can be enabled with appropriate delay after person with extended access needs swipes her/his card.

### Door Remain Open Duration with First Person

Set the door open duration when first person is in. After the first person is authorized, it allows multiple persons access the door or other authentication actions.

### Duress Code

The door can open by inputting the duress code when there is duress. At the same time, the client can report the duress event.

### Super Password

The specific person can open the door by inputting the super password.

### Dismiss Code

When the alarm is triggered, you can enter the dismiss code to dismiss the alarm.



### Note

The duress code and the super password should be different.

---

## Set Authentication Parameters

You can enter the authentication parameters page from the following 2 methods:

1. Click **Access Control** → **Access Point Management** . Hover the mouse on the card reader and click  to enter the authentication parameters page.
2. Click **Access Control** → **Parameter Settings** → **Authentication Parameters** .

Click **Save** to save the settings after the configuration. Click **Copy to** to copy the card reader's parameters to other card readers.



### Note

The functions vary according to different models. Refers to the actual device for details.

---

## Card Reader Parameter Configuration

### **Card Reader Name**

Create a name for the card reader.

### **Card Reader Type/Card Reader Description**

View the card reader's type and description.

### **Enable Authentication Device**

Enable the authentication function.

### **Authentication Interval**

You can set the authentication interval of the same person when authenticating. The same person can only authenticate once in the configured interval. A second authentication will be failed.

### **Alarm of Max. Failed Attempts**

Enable to report alarm when the card reading attempts reach the set value.

### **Max. Authentication Failed Attempts**

Enable to report alarm when the card reading attempts reach the set value.

### **Communication with Controller Every**

When the access control device cannot connect with the card reader for longer than the set time, the card reader will turn offline automatically.

### **Max. Interval When Entering Password**

When you entering the password on the card reader, if the interval between pressing two digits is longer than the set value, the digits you pressed before will be cleared automatically.

### **OK LED Polarity/Error LED Polarity/Buzzer Polarity**

Set OK LED Polarity/Error LED Polarity/Buzzer Polarity of the access control device according to the card reader parameters. Generally, adopts the default settings.

### **Tampering Detection**

Enable the anti-tamper detection for the card reader.

### **QR Code**

Enable the function and the card reader can recognize the QR code for authentication.



#### **Note**

The function should be supported by the card reader.

---

## **Bluetooth Parameter Configuration**

### **Enable Bluetooth**

Enable the bluetooth function and the you can use the bluetooth function (e.g. opening door) on the card reader.

### **Device Name/Transmitting Power**

Edit the card reader's name and its transmitting power.

### Open Door via Bluetooth

Enable the function and you can open the door via bluetooth through App. You should add the device to the App before use the function.

### Open Door via Gesture Occlusion/Occlusion Times/Occlusion Detection Distance

After enabling, you can open door via gesture. You need set **Occlusion Times** and **Occlusion Detection Distance**.



#### Note

Continuously occluding detector is not allowed. The duration of each occlusion can not exceed 5 seconds.

---

### Authentication Plan Configuration

Set the authentication schedule for the card reader.

Select an authentication type and drag the time duration on the time schedule table to draw the authentication duration.

Click **Clear** and drag a time duration to delete, or click ... → **Clear All** to delete all time durations.

### Set Smart Parameters

Click **Access Control** → **Parameter Settings** → **Smart** → **Smart** .

---



#### Note

- The functions vary according to different models. Refers to the actual device for details.
  - After configuring the general parameters, all card readers will take effect.
- 

Click **Save** to save the settings after the configuration.

### Fingerprint Recognition

The device support recognition fingerprint after the function is enabled.

### Fingerprint Security Level

Select the fingerprint security level.

The higher is the security level, the lower is the false acceptance rate (FAR).

## 8.4.4 Permission Management

You can set access permission schedule template, holiday schedule template, and set access permission.

## Configure Schedule Template

### Add Access Schedule Template

Access schedule template is used to set the allowed passing time for people to entry and exit. The system disk provides 3 default access schedule templates: All-Day Template, Workday Template and Weekday Template. The user can also add customized template according to needs.

#### Steps

1. Click **Access control** → **Permission Management** → **Access Plan Management** → **+Add**.

Basic Information

\* Name

Copy from  ▾

Weekly Schedule

Weekly Schedule

	00:00	02:00	04:00	06:00	08:00	10:00	12:00	14:00	16:00	18:00	20:00	22:00
Sun												
Mon												
Tue												
Wed												
Thu												
Fri												
Sat												

Holiday Schedule

Holiday Schedule

Figure 8-2 Add Access Schedule Template

2. Set basic information.

#### Name

Set basic information.

#### Copy from

The user can select an existing template. After selected, the chosen one will be duplicate to your current template. The user can make adjustments based on this template.

3. On Weekly Schedule, click **Access Time Period**, then you can drag your cursor on the time bar to set access time. You can enable authentication times, and set the authentication times.

---

### Note

A maximum of 8 period is allowed per day.

- 4. Optional:** Click **Clear**, then drag your cursor. The overlapping part can be erased. You can also click a certain time period then adjust it manually.
- 5. Optional:** Select Holiday Schedule.

---

### Note

If the chosen Holiday schedule has conflict with Weekly Schedule, the Weekly Schedule will be prioritized.

- 1) Click **Select Holiday**.
- 2) Select existing holiday schedule or click **Add**. Enter Holiday Name, Date and Access Time Period.

---

### Note

A maximum of 8 period is allowed per day.

- 3) Click **OK**.
  - 4) The user can then check the allowed access time period during the holiday.
- 6. Click Save.**

## Holiday Schedule Template

Set official holidays or specified dates as holidays. The access level of set holidays is higher than the other basic access level.

### Steps

1. Click **Access control** → **Permission Management** → **Access Plan Management** → **+Add**.
2. Enter holiday name in the right column.
3. **Optional:** Enable **Repeat Annually** according to actual demand. Once enabled, the template will take effect every year. No need to set again. Applicable to set official holidays.
4. Set Start Date and End Date.
5. Drag cursor on corresponding time bar to map valid access period. People can access during valid access period. You can enable authentication times, and set the authentication times.
6. **Optional:** Click **Clear** to adjust chosen time period. You can also click a certain time period then adjust it manually.
7. Click **Save**.

## Access Control Management

Access permission can be customized or classified based on access point.

### Steps

1. Click **Access control** → **Permission Management** → **+Add**.

① Set Permission ... ② Select Passing ...

\* Access Permission Name

\* Select Access Schedule All-Day Template

Select Access Point

Available (0/6)

Enter.

Default Area

- Door1
- Door2
- 1
- 1
- 2
- 2

Selected (0/0)

Enter door name.

Door Name	Area
No data.	

**Figure 8-3 Access Control Management**

2. Enter **Access Permission Name**.
3. Select **Access Schedule** Template. Click **View Licenses** on the right side to check the access time period of different templates.
4. Click **+Add**. Select access point.
5. Click **Next**, enter or check the organization name or person.
6. Click **Complete**.
7. **Optional:** You can click **Batch Add Passing Persons**, select permission for person to add, organization and person.

## Set Offline Passing Permission

When access module disconnects from access controller, access module can lock or unlock door based on the configured passing permission.

### Steps

1. Click **Access Control** → **Permission Management** → **Offline Passing Permission** .
2. Set offline passing permission. Select the device, you can enable or disable **Allow Offline Passing** .

3. Set authentication person. click  → **Add** , enter organization name, select person or enable **Quick Select**, select persons in batch, and click **OK**.
4. **Optional:** You can select multiple devices, and click **Batch Enable Offline Passing**, **Batch Disable Offline Passing**, **Enable All** or **Disable All** to set offline passing permission.

### 8.4.5 Access Control Application

#### Open Door with First Person

After a set person (the first person) get verified via credential (such as card, fingerprint, face picture). The others can enter directly or can use credential to get through. Usually apply to mass transit scene.

#### Steps

1. Click **Access Control** → **Access Control Application** → **Open Door with First Person** → **Settings** → **+Add**.

← Add First Person In

\*Access Point + Add Delete

No. ↓	Access Point	Area	Operation
<div style="text-align: center;">                       No data.                 </div>			

Rule of Opening Door 
 Free Access After First Person ⓘ  Authorization by First Person ⓘ

\*Door-Open Duration  min

\*Consecutive Authentication Ti...

\*Interval of Consecutive Authe...  s

First Person Authentication Time

First Person + Add Delete

No. ↓	Name	Employee ID	Card	Fingerprint	Operation
<div style="text-align: center;">  </div>					

OK
Cancel

**Figure 8-4 Open Door with First Person**

2. Click **+Add**.Select access point.
3. Set parameters for Open Door with First Person.

### Rule of Opening Door

#### Free Access After First Person

The mode is applicable for the passing of groups of persons, such as visitors entering the scenic spots. After the set person passes through, the door will open for a set time and other persons can pass through without authentication. Door-Open Duration.

#### Authorization by First Person

The mode is applicable to places with high security requirements. Only after the person configured with access permission passes through, other persons can pass through after authenticating with credentials.

### Consecutive Authentication Times

Numbers of successful authentication during consecutive authentication.

### Interval of Consecutive Authentication

The permitted length of interval of consecutive authentication for a same person. Repeated authentication for the same person during the interval is not valid.

### First Person Authentication Time

Set **Rules Takes Effect at** and **Authentication Period**.

4. Add First Person Click **+Add** to choose person.
  - 1) Click **+Add**.
  - 2) Select a person.
  - 3) Click **OK**.
5. Click **OK**.
6. **Optional**: Select persons you want to delete from the list. Click **Delete**.

### Multi-Factor Authentication Settings

Only after authenticating according to the multi-factor authentication rule, can persons in multi-factor authentication groups open the door.

#### Before You Start

- Please refer to ***Permission Management*** for completed configuration information and detailed configuration method.

#### Steps

1. Click **Access Control** → **Access Control Application** → **Multi-Factor Authentication** → **Set**.

Multi-Factor Authentication Name

\* Access Point

\* Authentication   
Persons authenticate on the card reader. All authentications are completed on the card reader.

\* Access Schedule

Time Interval of Card Present  s

Group

Enter group name.



No data.

**Figure 8-5 Multi-Factor Authentication Settings**

2. Click **Group Management** to configure group.
  - 1) Click **+** on the left, then enter group name.
  - 2) Click **+Add** and select persons you want to add to this group. Click **OK**.
  - 3) Click **OK**. The added groups will be showed in the left column. Information of group members will be showed at the right side of the page.
  - 4) **Optional:** Choose one group, then click **+Add** on the right to add more group members. Select and click **OK**.
3. Add Multi-Factor Authentication Rule.
  - 1) Click **+Add** at the interface of Multi-Factor Authentication.
  - 2) Set Facial Recognition Parameters.

**Multi-Factor Authentication Name**

Enter Multi-Factor Authentication Name.

**Access Point**

Select access point which needs multi-factor authentication from the drop-down list.

**Authentication Mode**

**Local Authentication**

Persons can open the door only after they complete authentications following rules on the card reader.

### **Local Authentication + Remotely Opening Door**

Persons should authenticate on the device first and the authentication will be confirmed remotely on client.

### **Local Authentication + Super Credential**

Authenticate on the card reader. If the card reader is offline, authenticate by super credential.

### **Access Schedule**

Select access schedule which need multi-factor authentication. Click **View Licenses** to check the chosen schedule template in details.

### **Time Interval of Card Present**

Time interval between configuration for two different persons.

### **Group**

Click **Link to Organization** to choose the group. Adjust the sequence of the chosen groups by dragging  in the action bar. Before opening the door, please refer to sequence in the list and **No.** of people needed to be verified to do actual verification.

3) **OK**.

4. **Optional:** Select multi-factor authentication not needed, then click **Delete**.

5. Click  to check access schedule in details.

## **Multi-Door Interlocking Settings**

Set the multi-door interlocking between multiple doors of the same access control device. To open one of the doors, other doors must keep closed.

### **Steps**

1. Click **Access Control** → **Access Control Application** → **Multi-Door Interlocking** → **Set**.

Name

Access Point + Add 🗑 Delete

No.	Access Point	Area	Operation
 No data.			

Extended Open Duration  s ^ v

OK Cancel

**Figure 8-6 Multi-Door Interlocking Settings**

2. Enter Name.
3. Click **+Add**, select access point to form a multi-door interlocking group.
4. It is recommended to delete unnecessary access point in the area.
  - Select access points not needed. Click **Delete** to delete in batches.
  - Click 🗑 to delete single access point.
5. Click **OK**.
6. To edit or delete existing multi-door interlock.
  - Select one multi-door interlock. Click ✎ to edit.
  - Select one multi-door interlock. Click 🗑 to delete.
  - Select multiple multi-door interlocks. Click **Delete** to delete in batches.

## Anti-Passback Settings

People can only pass through access points according to the set sequence. If not followed the set path, the door will not open. If one swipe card without going through, he or she will be blocked the next time she or she wants to come in. Vice versa.

### Steps

1. Click **Access Control** → **Access Control Application** → **Anti-Passback**.
2. Add Anti-Passback Route.
  - 1) Enter name of Anti-Passback Parameter. Click **Next**.
  - 2) Card reader Order. Click **Add**. Select a card reader needed.

- 3) Click  to add the next card reader.
- 4) Repeat sub step 3 to add more card readers.
- 5) **Optional:** Click card reader to replace or delete.
- 6) Click **Next Step**.
- 7) First Card Reader

### Disable

- If the card reader one pass through last time doesn't have anti-passback, or the person is a new user. Anti-passback access granted.
- If the card reader one pass through last time have anti-passback and the current card reader is its subsequent card reader in its anti-passback route, anti-passback access granted; if the current card reader is not its subsequent card reader, anti-passback access denied.

### Select one card reader as the First Card Reader

- Access granted whenever a person swipe his or her card at the First Card Reader
- If the card reader one pass through last time have anti-passback and the current card reader is its subsequent card reader in its anti-passback route, anti-passback access granted; if the current card reader is not its subsequent card reader, anti-passback access denied.



### Note

- If you violated the anti-passback rule, you should swipe the card again from the first card reader.
- Superusers are exceptions.
- Anti-passback route can have maximum 64 doors.

---

### 3. **Optional:** Anti-Passback Parameter.

- 1) Click **Anti-Passback Parameter**.
- 2) Select Judgment Mode of Person Passing Status.

#### By Authentication Status

Anti-Passback Routine judged by authentication via card.

#### By Actual Traffic Status

Anti-Passback Routine judged by actual card opening.

- 3) Enable **Forgive Anti-Passback** to configure schedule.

#### Forgiving Mode

##### Forgive Anti-Passback Regularly

Set time of **Forgive Anti-Passback Regularly**. The system will forgive anti-passback. Then person need to follow the anti-passback route to start from the the First Card Reader.

##### Delay Forgiving Anti-Passback

Set time of **Delay Forgive Anti-Passback**. The system will start timing and forgive anti-passback once reach the set delayed time. Then you should follow the anti-passback rule and start again from the first card reader.

### Non Anti-Passback Period

Select **Effective Time**, then drag cursor on the time bar to map non anti-passback period. Anti-passback is invalid during the chosen period.

Click **Clear** and drag your cursor on the timestamp to delete certain time period.

Click ... → **Clear All** to delete all time period chosen.

4) Click **Save**.

4. To edit or delete existing anti-passback.

- Select one anti-passback. Click  to edit.
- Select one anti-passback. Click  to delete.
- Select multiple anti-passbacks. Click **delete** to delete in batches.
- Select one anti-passback. Click  to view anti-passback route.

### Set Remain Open or Closed

Set the time period by week during which the door(s) remains locked/unlocked.

#### Steps

1. Click **Access Control** → **Access Control Application** → **Remain Open or Closed** \ → **Set**.

Name

\*Access Point + Add 🗑 Delete

No.	Access Point	Area	Operation
 No data.			

Weekly Schedule Template 📅 Rema... 📅 Rema... Quick Operation 🗑 Clear ⋮

	00	02	04	06	08	10	12	14	16	18	20	22	24
Sun													
Mon													
Tue													
Wed													
Thu													
Fri													
Sat													

Save Cancel

**Figure 8-7 Remain Open or Closed**

2. Click **+Add**.
3. Add Access Point.
  - 1) Click **+Add**.
  - 2) Select access point in the pop-up on the right. Click **OK**.
  - 3) Click  to delete single access point or select multiple access points and then click **Delete** to delete in batches.
4. Weekly Schedule Template.
  - 1) Map the Remain Open or Closed time period.
    - Click **Remain open** or **Remain Closed**. Drag cursor on the timestamp to map the time period needed.
    - Click **Remain Open** or **Remain Closed**, then click **Quick Operation**. Choose **All-Day Schedule**, **Workday Schedule** or **Weekend Schedule**. The system will automatically draw the corresponding time period.
  - 1) **Optional**: Click **Clear** and drag your cursor on the timestamp to delete certain time period. Click **⋮** → **Clear All** to delete all time period chosen.
5. Click **Save**.

## 8.5 Person Management

### 8.5.1 Add Organization

After you add an organization, you can add people to the corresponding organization.

#### Steps

1. Click **Person Management** to enter the settings page.
2. Click **+** on the left side of the page and select the parent organization.
3. Create the organization name.
4. Click **Save**.

The added organization will be listed in the selected parent organization.

#### 5. **Optional:** Edit / Delete

- Click an organization, and then click  to edit the organization information.  
Select people and click **Delete** to delete the information in batch.  
Click **Clear All**, and all person information will be deleted.
- Click an organization and click  to delete that organization information.

### 8.5.2 Add Person

Add the person's information, including the basic information, certificate, authentication and settings.

#### Add Basic Information

Click **Person Management** → **Add** to enter the Add Person page.

Add the person's basic information, including the employee ID, the person's name, organization, gender, and person type.



#### Note

- If you select **Visitor** as the person type, you can set the visit times.
- Letters are allowed in the employee ID. Up to 32 bits are allowed.
- Up to 128 bits are allowed in the name.

---

Click **Add** to save the settings.

Click **Save and Continue** to save the settings and continue to add next person.

#### Set Permission Time

Click **Person Management** → **Add** to enter the Add Person page.

Enable **Long-Term Effective User**, or set **Start Time** and **End Time** and the person can only has the permission within the configured time period according to your actual needs.

Click **Add** to save the settings.

Click **Save and Continue** to save the settings and continue to add next person.

### Add Card

Click **Person Management** → **Add** to enter the Add Person page.

Click **Configuration**. If select the Collection Device as **Card Enrollment Station**, you should select the device model, card type, set buzzing, M1 card encryption, and sector. Click **OK** to save.

---

#### Note

If select the Collection Device as **Card Enrollment Station**, click **Download** to download the plug-in to view the device status. During the installation, you should close the web page.

---

If select the Collection Device as **Card Reader**, you should select the card reader from the drop-down list. Click **OK** to save.

Click **Add Card**, enter the **Card No.** and select the **Property**, and click **OK** to add the card.

Click **Add** to save the settings.

Click **Save and Continue** to save the settings and continue to add next person.

### Add Fingerprint

#### Note

Only devices supporting the fingerprint function can add the fingerprint.

---

Click **Person Management** → **Add** to enter the Add Person page.

Click **Configuration**. If you select **USB Fingerprint Recorder**, you can click **Download** to download the plug-in and view the status. Or select **Fingerprint and Card Reader** and select a card reader from the drop-down list. Click **OK** to save.

---

#### Note

During the installation, you should close the web page.

---

Click **Add Fingerprint**, and press your finger on the fingerprint module of the device to add your fingerprint.

Click **Add** to save the settings.

Click **Save and Continue** to save the settings and continue to add next person.

---

#### Note

The plugin for adding card or fingerprint via USB is only available in Windows.

---

### Add PIN

Before configuring PIN, it is necessary to clarify whether the PIN is a device-set personal PIN or a platform-applied personal PIN. If it is a device-set personal PIN, it can be created or edited on the device or on the web, and cannot be set on other platforms; If it is a platform-applied personal PIN, it can be created or edited on the platform, and issued to the device before it can be used. It cannot be set on the device or on the web.

Make sure you have already set the PIN mode as **Device-Set Personal PIN** in [Set Password Mode](#) .

Click **PIN Mode** on the page to go to configure.

Click **Person Management** → **Add** to enter the Add Person page.

Set the PIN. Or click **Auto Generate** to generate a PIN automatically.

Click **Add** to save the settings.

Click **Save and Continue** to save the settings and continue to add next person.

### Authentication Settings

Click **Person Management** → **Add** to enter the Add Person page.

Set the authentication type.

Click **Add** to save the settings.

Click **Save and Continue** to save the settings and continue to add next person.

### Permission Management

Before you start:

- You have already add the device. For details, see [Device Management](#) .
- You have already complete access point management. For details, see [Access Point Management](#) .
- You have already complete the access permission management. For details, see [Permission Management](#) .

Click **Person Management** → **Add** to enter the Add Person page.

Set the permission parameters.

#### Permission Type

##### By Permission Group

Click **Allocate** and select an added access permission. The person will contain the checked access permission. If you have not added the access permission in advance, you can click **Add Access Permission** to add. For details, see [Permission Management](#) . Click **OK**.

##### By Access Point

Click **Allocate** and select the access schedule. Click **Add** to add the access points. The person will contain the permissions of the access point within the access schedule. Click **OK**.

#### Extend Door Opening

The person related door will close after the configured time duration. You should go to [Set Door Parameters](#) to set the **Extended Open Duration**. Click **Door Parameters** to go to the configuration page.

Click **Add** to save the settings.

Click **Save and Configure** to save the settings and continue to add next person.

### Edit/Delete/Search Person

Click **Person Management** to enter the page.

Select a person and click  to edit the person's information.

Select a person and click  to delete the person information.

Select multiple person, click **Delete** can delete person in batch.

Click **Import** or **Export**.

Click **Clear All** to delete all person information.

Click  or  to switch the viewing method.

Enter the person's employee ID and select the credential status and click **Filter** to search. Click **Reset** to reset all conditions.

Check **Show Sub Organization**, all persons in the sub organizations will be displayed.

## 8.6 Device Management

### 8.6.1 Search Not Added Device

The system can automatically search for not added modules that have been connected to the access controller.

Click **Device Management** → **Search Not Added Device** . The searched not added modules will be displayed in the list of the page.

Click **+** in the action bar to add module to the access controller.

### 8.6.2 Add Access Module

Add access module manually.

#### Before You Start

Make sure that the area has been added. For more details, see [Area Management](#) .

#### Steps

1. Click **Device Management** to enter the settings page.

Figure 8-8 Add Access Module

2. Select IO module.
3. Select the dial address of the access module, and set the DIP switch of the access module to be consistent with the one shown in the picture.

 **Note**

After adding or modifying the dialing address of the access module, you need to reboot the access module to take it effect.

4. Set the door parameters, and click **Next**.

**Select Door of Access Module**

According to the door actually controlled by the access module, select **1** or **2**.

**Door Name**

Create the door name associated with the access module.

**Area**

Choose the area from the drop-down list. If you have not created an associated area in advance, click **Add Area** to create.

**Open Duration**

Set the action time after the associated door is unlocked. If the door is not opened within the set time, the door will lock automatically. The range can be set from 1 to 255 s.

**Door Lock Status**

You can set the door lock status as **Remain Open** or **Remain Closed** according to your actual needs. By default, it is **Remain Closed**.

### **Exit Button Type**

Under normal circumstances, it is Remain Open (except for special needs).

### **Extended Open Duration**

For the elderly or children with reduced mobility, by set Extended Open Duration, the door magnetic sensor opening time after swiping card can be appropriately delayed.

## **5. Set the card reader parameters associated with the access module.**

### **Select Door of Access Module**

According to the door actually controlled by the access module, select **1** or **2**.

### **Select Card Reader**

Select Enter or Exit according to the actual card reader location.

### **Card Reader Name**

Create the card reader name.

### **Card Reader Description**

View the card reader description. Read Only

### **QR Code**

If the card reader supports the QR code authentication function, this function can be enabled, then on the card reader, it can be carried out through the QR code authentication.

### **Enable Bluetooth**

If the card reader supports the Open Door via Bluetooth function, this function can be enabled, then on the card reader, the door can be opened via bluetooth.

### **Authentication Plan Configuration**

Set the authentication plan of different authentication type. You can set different authentication type in different time periods.

Select the authentication type (you can select more than one), and draw the required time period in the time bar below, during which you can perform the selected authentication type.

Click **Clear** and select the time period that has been drawn in the time bar to clear the plan.

Click ... → **Clear All** to clear all time periods.

## **6. Set alarm input and out parameters.**

### **Alarm Input**

Set the alarm input No. and name.

### **Alarm Output**

Set the alarm output No. and name. You can set **Alarm Duration**.

### **Continuous Alarm**

The alarm output device will continuously in the alarm status.

## Custom Alarm Duration

You should set the custom duration. The alarm output device will be in the alarm status for the configured time duration.

---

### Note

Range: from 1 to 5999s.

---

7. Click **OK**.

8. You can click **Import** to import access module.

9. **Optional:** Other Operations

**Icon** Description



You can edit the access module.



You can delete the access module.



You can restart the access module.



You can restore the access module to the factory settings.



You can upgrade the access module. Select a local upgrade package to upgrade.

## 8.6.3 Add IO Module

Add IO module manually.

### Steps

---

#### Note

Up to 26 IO modules can be accessed.

---

1. Click **Device Management** to enter the settings page.

2. Select IO module.

3. Select the dial address of the IO module, and set the DIP switch of the IO module to be consistent with the one shown in the picture.

---

#### Note

After adding or modifying the dialing address of the IO module, you need to reboot the IO module to take it effect.

---

4. Set alarm input and out parameters.

#### Alarm Input

Set the alarm input No. and name.

#### Alarm Output

Set the alarm output No. and name. You can set **Alarm Duration**.

#### Continuous Alarm

The alarm output device will continuously in the alarm status.

### Custom Alarm Duration

You should set the custom duration. The alarm output device will be in the alarm status for the configured time duration.



Range: from 1 to 5999s.

---

5. Click **OK**.

6. **Optional:** Other Operations

Icon	Description
	You can edit the IO module.
	You can delete the IO module.
	You can restart the IO module.
	You can upgrade the IO module. Select a local upgrade package to upgrade.

### 8.6.4 Area Management

After you create an area, you can add access control points to the area to manage them in a partition.

#### Steps

1. Click **Device Management** → **Area Management**.

2. Click **+** on the left side of the page, select a parent area, and create the area name.

3. Click **Save**.

The added area will be listed in the selected parent area.

4. **Optional:** Edit / Delete

- Select the area and click  to edit the information.

Select multiple personnel, and click **Delete** to delete the information of person in batch.

Click **Clear All** to delete information of all personnel.

- Select the area, and click  to delete the information of area.

## 8.7 System and Maintenance

### 8.7.1 View Device Information

View the device name, language, model, serial No., version, IO input, IO output, RS-485, alarm input, alarm output, and device capacity, etc.

Click **System and Maintenance** → **System Configuration** → **System** → **System Settings** → **Basic Information** to enter the configuration page.

You can the device name, language, model, serial No., version, RS-485, alarm input, alarm output, and device capacity, etc.

### 8.7.2 Set Time

Set the device's time zone, synchronization mode, server address, NTP port, and interval.

Click **System and Maintenance** → **System Configuration** → **System** → **System Settings** → **Time Settings** .

Click **Save** to save the settings after the configuration.

#### Time Zone

Select the device located time zone from the drop-down list.

#### Time Synchronization Mode

##### NTP

You should set the NTP server's IP address, port No., and interval.

##### Manual

By default, the device time should be synchronized manually. You can set the device time manually or check **Sync. with Computer Time** to synchronize the device time with the computer's time.

##### Server IP Address/NTP Port/Interval

You can set the server IP address, NTP port, and interval.

### 8.7.3 Set DST

#### Steps

1. Click **System and Maintenance** → **System Configuration** → **System** → **System Settings** → **Time Settings** .
2. Enable **DST**.
3. Set the DST start time, end time and bias time.
4. Click **Save** to save the settings.

### 8.7.4 Change Administrator's Password

#### Steps

1. Click **System and Maintenance** → **System Configuration** → **System** → **User Management** .
2. Click  .
3. Enter the old password and create a new password.
4. Confirm the new password.

5. Click **Save**.



### **Caution**

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the service provider and/or end-user.

---

### **8.7.5 Account Security Settings**

You can change the security questions and answers, or the email address for the device. After change the settings, once you forgot the device password, you should answer the new questions or use the new email address to reset the device password.

#### **Steps**

1. Click **System and Maintenance** → **System Configuration** → **System** → **User Management** → **Account Security Settings** .
2. Change the security questions or email address according your actual needs.
3. Enter the device password and click **OK** to confirm changing.

### **8.7.6 View Online User**

You can view online users.

Click **System and Maintenance** → **System Configuration** → **System** → **User Management** → **Online Users** .

You can view online users' information including name, type, IP Address and operation time. Click **Refresh** to refresh the page.

### **8.7.7 View Open Source Software License on PC Web**

On the main page of the device PC Web, click  → **Open Source Software Statement** , to view the device license.

### **8.7.8 View Device Arming/Disarming Information**

View device arming type and arming IP address.

Go to **System and Maintenance** → **System Configuration** → **System** → **User Management** → **Arming/Disarming Information** .

You can view the device arming/disarming information. Click **Refresh** to refresh the page.

### 8.7.9 Network Settings

#### Set Basic Network Parameters

Click **Configuration** → **Network** → **Network Settings** → **TCP/IP** .

Set the parameters and click **Save** to save the settings.

##### NIC Type

Select a NIC type from the drop-down list.

##### DHCP

If uncheck the function, you should set the IPv4 address, IPv4 subnet mask, IPv4 default gateway, IPv6 mode, IPv6 address, IPv6 subnet prefix length, IPv6 default gateway, Mac address, and MTU.

If you check the function, the system will allocate the IPv4 address, IPv4 subnet mask, the IPv4 default gateway, IPv6 mode, IPv6 address, IPv6 subnet prefix length, and IPv6 default gateway automatically.

##### DNS Server

Set the preferred DNS server and the Alternate DNS server according to your actual need.

#### Set Wi-Fi Parameters

Set the Wi-Fi parameters for device wireless connection.

##### Steps



##### Note

The function should be supported by the device.

---

1. Click **System and Maintenance** → **System Configuration** → **Network** → **Network Settings** → **Wi-Fi** .
2. Check **Wi-Fi**.
3. Select a Wi-Fi
  - Click  of a Wi-Fi in the list and enter the Wi-Fi password.
  - Click **Add** and enter a Wi-Fi's name, password, and encryption type. Click **Connect**. When the Wi-Fi is connected, click **OK**.
4. **Optional:** Set the WLAN parameters.

- 1) Set the IP address, subnet mask, and default gateway. Or enable **DHCP** and the system will allocate the IP address, subnet mask, and default gateway automatically.

5. Click **Save**.

### Device Hotspot

After you turn on the device hotspot, you can use your phone to connect to the device hotspot and configure it.

Click **System and Maintenance** → **System Configuration** → **Network** → **Network Settings** → **Device Hotspot** .

Click **Enable Device Hotspot** to enable the function and view the device hotspot name.

Click **Save**.

You can follow these steps to enable the AP.

1. Connect to the device hotspot with your mobile phone by entering the hotspot password. The activation page will pop up.



- If automatic pop-up failed. Enter the device default IP or enter [www.acsvis.com](http://www.acsvis.com) in the browser to enter the activation page.
- For inactive devices, the device hotspot name is AP\_Serial Number, and the hotspot password is the device serial number.
- The device is in the AP mode by default. The AP mode will be disabled after 30 min. Hold key 5 for 10 s to enter the AP mode again.
- After device activation, the hotspot password will be changed to the device activation password.

- 
2. Create a new password (admin password) and confirm the password.



Characters containing admin and nimda are not supported to be set as activation password.



**STRONG PASSWORD RECOMMENDED**-We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

- 
3. Tap **Activate**.

4. Enter **Configuration** → **Communication Settings** → **Wi-Fi** and connect to a Wi-Fi. Or edit the IP address via the mobile web, PC web browser and the client software. Edit the device IP address. You can edit the IP address via the SADP tool, PC web browser and the client software.

## Set Port Parameters

Set the HTTP, HTTPS, HTTP Listening, RTSP and Server port parameters.

Click **System and Maintenance** → **System Configuration** → **Network** → **Network Service** → **HTTP(S)** .

### HTTP

It refers to the port through which the browser accesses the device. For example, when the HTTP Port is modified to 81, you need to enter ***http://192.0.0.65:81*** in the browser for login.

### HTTPS

Set the HTTPS for accessing the browser. Certificate is required when accessing.

### HTTP Listening

The device can send alarm information to the event alarm IP address or domain name via HTTP protocol/HTTPS protocol. Edit the event alarm IP address or domain name, URL, port, and protocol.



### Note

The event alarm IP address or domain name should support the HTTP protocol/HTTPS protocol to receive the alarm information.

---

Click **System and Maintenance** → **System Configuration** → **Network** → **Network Service** → **WebSocket(s)** .

View WebSocket and WebSockets port.

## Set ISUP Parameters

Set the ISUP parameters for accessing device via ISUP protocol.

### Steps



### Note

The function should be supported by the device.

---

1. Click **System and Maintenance** → **System Configuration** → **Network** → **Device Access** → **ISUP** .

Enable

Protocol Version  ISUP5.0

Server IP Address

Port

Device ID

Encryption Key  

Register Status ✘ Offline

[More](#) 

---

**ISUP Listening**

ISUP Alarm Center IP/Domain Name

ISUP Alarm Center URL

ISUP Alarm Center Port

**Figure 8-9 Set ISUP Parameters**

2. Check **Enable**.
3. View the ISUP version, set server IP address, port, device ID, encryption key and view the ISUP status.
4. **Optional:** Click **More** to set the network connection priority.
  - 1) Enable **WLAN** or **Wired Network** according to your actual needs.
  - 1) Hold and drag  to adjust the access priority.
5. Set the ISUP listening parameters, including ISUP alarm center IP address/domain name, ISUP alarm center URL, and ISUP alarm center port.
6. Click **Save**.

## Platform Access

Platform access provides you an option to manage the devices via platform.

## Steps

1. Click **System and Maintenance** → **System Configuration** → **Network** → **Device Access** → **Hik-Connect** to enter the settings page.

---

### Note

Hik-Connect is an application for mobile devices. With the App, you can view live image of the device, receive alarm notification and so on.

---

2. Check **Enable** to enable the function.
  3. **Optional:** Check **Custom**, and you can set the server address by yourself.
  4. Enter the verification code.
  5. **Optional:** View the register status. Click **Refresh** to refresh the status.
  6. **Optional:** Click **More** to set the network connection priority.
    - 1) Enable **WLAN** or **Wired Network** according to your actual needs.
    - 1) Hold and drag  to adjust the access priority.
  7. Click **View** to view device QR code. Scan the QR code to bind the account.
- 

### Note

8 to 32 letters (a to z, A to Z) or numbers (0 to 9), case sensitive. You are recommended to use a combination of no less than 8 letters or numbers.

---

8. Click **Save** to enable the settings.
9. **Optional:** Click **Refresh** to refresh the binding status.
10. Click **Save**.

## 8.7.10 Event Settings

Set the event linkage and the alarm output parameters.

### Event Linkage

Set linked actions for events.

#### Steps

1. Click **Access Control** → **Parameters Settings** → **Linkage Settings** to enter the page.
2. Click **+**
3. Set event source.
  - If you choose **Linkage Type** as **Event Linkage**, you need to select event types from the drop-down list.
  - If you choose **Linkage Type** as **Card Linkage**, you need to enter the card No. and select the card reader.
  - If you choose **Linkage Type** as **Link Employee ID**, you need to enter the employee ID and select the card reader.
4. Set linked action.

## Linked Access Controller Buzzing

Enable **Linked Access Controller Buzzing** and select **Start Buzzing** or **Stop Buzzing** for the target event.

## Card Reader Linkage

Enable **Card Reader Linkage** and click **Add** can check the card reader that will buzz. Click **Save**.

Set the card reader's buzzing action.

Click  to delete single card reader. Check the card readers and click **Delete** to delete in batch. Click **Batch Configure** to configure all card readers in the list.

## Door Linkage

Enable **Door Linkage** and click **Add** can check the card reader that will buzz. Click **Save**.

Set the access point's action.

Click  to delete single card reader. Check the card readers and click **Delete** to delete in batch.

## Linked Alarm Output

If the Linkage Type in the Event Source is **Card Linkage**, when enable **Linked Alarm Output**, you can set **Triggering Times Configuration**, **Triggering Times (Enable)**, and **Triggering Times (Disable)**.

If set **Triggering Times (Enable)** as 3, and **Triggering Times (Disable)** as 3, you can present the card that configured in the Event Source for 3 time to stop alarm when the following alarm output in the list is in open status. If the alarm output is in the disabled status, you can present the card for 3 times to trigger alarm.

Set the alarm output. Click **Add** and check the alarm outputs in the list and click **Save**.

Click  to set the alarm duration. Click **Save**.

---

### Note

After the configuration is completed, the configuration of the same output linked to other actions will also be changed.

---

## Continuous Alarm

The alarm output device will continuously in the alarm status.

## Custom Alarm Duration

You should set the custom duration. The alarm output device will be in the alarm status for the configured time duration.

---

### Note

Range: from 0 to 5999s.

---

5. Click **Save**.

6. If you want to map the device linkage mode of a module to other modules, you can click **Copy To**, select or enter a device name, and click **OK**.

## Alarm Output Settings

Set the device's alarm output parameters.

Click **System and Maintenance** → **System Configuration** → **Event** → **Alarm Settings** → **Alarm Output** .

Select an access point from the list on the left. Select a alarm output device No. Create a name for the alarm output device and set the alarm duration. Click **Save**. You can click **Copy To** to copy the parameters.

### Continuous Alarm

The alarm output device will continuously in the alarm status.

### Custom Alarm Duration

You should set the custom duration. The alarm output device will be in the alarm status for the configured time duration.



#### Note

Range: from 1 to 5999s.

---

## Alarm Input Settings

Set the device's alarm input parameters.

Click **System and Maintenance** → **System Configuration** → **Event** → **Alarm Settings** → **Alarm Input** .

Select the device, set No. and name. Click **Save**.

### 8.7.11 Access Configuration

You can set RS-485, Wiegand and host parameters.

#### Set RS-485 Parameters

You can set the RS-485 parameters including the peripheral, address, baud rate, etc.

Click **System and Maintenance** → **System Configuration** → **Access Configuration** → **RS-485** .

RS-485 Protocol

Card Reader

RS-485 Communication Backup

RS-485 Protocol Private

Access Module

RS-485 Communication Mode  Redundant Wiring  Single Wiring

Serial Port Parameter

No. 1 2 3 4 5 6 7

Baud Rate 115200

Serial Port Name 485A

Save

**Figure 8-10 Set RS-485 Parameters**

Click **Save** to save the settings after the configuration.

### RS-485 Communication Backup

When enabled, there will be a backup line when the reader communicates via RS-485.

### RS-485 Protocol

Select the RS-485 protocol from the drop-down list.

### RS-485 Communication Mode

#### Redundant Wiring

When the access controller connects to the terminal (RS-485A/RS-485B/RS-485C/RS-485D) of the access module, RS-485A and RS-485B are a pair using redundancy wiring, and RS-485C and RS-485D are another pair. When one of the channels is disconnected, the access controller can communicate with another channel. No more than 32 access module(s) can be connected to the access controller.

#### Single Wiring

RS-485A to RS-485D are communication terminals of the access module. The RS-485E terminal on the access controller can be connected to RS-485A to RS-485D terminals via single wiring for data transmission. No more than 62 access module(s) can be connected to the access controller.

### No.

Select the RS-485 No.

### Baud Rate

The baud rate when the devices are communicating via the RS-485 protocol.

### Serial Port Name

View the serial port name.

## Set Wiegand Parameters

You can set the Wiegand transmission direction.

### Steps

---



Some device models do not support this function. Refer to the actual products when configuration.

---

1. Click **System and Maintenance** → **System Configuration** → **Access Configuration** → **Wiegand Settings** .
2. Select a access point from the list on the left.
3. Set Wiegand parameters.

#### No.

Select Wiegand No. for parameters settings.

#### Wiegand

select to enable the card reader's Wiegand function.

#### Wiegand Direction

By default, the direction is **Input**.

#### Wiegand Mode

Select the Wiegand mode and the card reader can communicate with the controller by Wiegand 26/34 or other protocol.

Click **Auto Recognize**, enter card No. to recognize the Wiegand mode. Enter the Card No., and click **Start to Recognize**. Present the card on the related card reader. The system will show the Wiegand mode. Click **OK**.

If select **Custom**, you should set custom Wiegand parameters. Click **Custom Wiegand Settings**, and set the name, parity type, total length and Wiegand rule. Click **OK**.

#### Wiegand Mapping Card Reader

Select the Wiegand card reader related door and card reader direction.

4. Click **Save** to save the settings.
- 



If you change the peripheral, and after you save the device parameters, the device will reboot automatically.

---

### Door Magnetic Contact Settings

Set the opening and closing door status of the door magnetic contact to match the actual wiring method.

#### Before You Start

The access controller has connected to the door magnetic contact.

#### Steps

1. Click **System and Maintenance** → **Maintenance** → **Device Access** → **Host Parameter** to enter the settings page.
2. Select the door magnetic contact status.

#### Barrier Open Status (Default)

The door magnetic contact is in open status in default. Access controller is connected to the door magnet contact through NO.

#### Door Closed Status

The door magnetic contact is in closed status in default. Access controller is connected to the door magnet contact through NC.

### 8.7.12 Card Settings

#### Set Card Security

Click **System and Maintenance** → **System Configuration** → **Card Settings** → **Card Type** to enter the settings page.

Set the parameters and click **Save**.

#### Enable NFC Card

In order to prevent the mobile phone from getting the data of the access control, you can enable NFC card to increase the security level of the data.

#### Enable M1 Card

Enable M1 card and authenticating by presenting M1 card is available.

#### M1 Card Encryption

##### Sector

M1 card encryption can improve the security level of authentication.

Enable the function and set the encryption sector. By default, Sector 13 is encrypted. It is recommended to encrypt sector 13.

#### Enable EM Card

Enable EM card and authenticating by presenting EM card is available.

---

### **Note**

If the peripheral card reader supports presenting EM card, the function is also supported to enable/disable the EM card function.

---

#### **Enable DESFire Card**

The device can read the data from DESFire card when enabling the DESFire card function.

#### **DESFire Card Read Content**

The device can read the DESFire card content.

#### **Enable FeliCa Card**

The device can read the data from FeliCa card when enabling the FeliCa card function.

### **Set Card No. Authentication Parameters**

Set the card reading content when authenticate via card on the device.

Go to **System and Maintenance** → **System Configuration** → **Card Settings** → **Card No. Auth. Settings** .

Select a card authentication mode and set the reversed card No. and click **Save**.

#### **Full Card No.**

All card No. will be read.

#### **3 bytes**

The device will read card via Wiegand 26 protocol (read 3 bytes).

#### **4 bytes**

The device will read card via Wiegand 34 protocol (read 4 bytes).

#### **Enable Reversed Card No.**

The read card No. will be in reverse sequence after enabling the function.

### **8.7.13 Maintenance and Security**

#### **Set Privacy Parameters**

Set the event storage type, picture upload and storage parameters, and the picture clearing parameters.

Go to **System and Maintenance** → **System Configuration** → **Security** → **Privacy Settings**

Select a method to delete the event. You can select from **Delete Old Events Periodically**, **Delete Old Events by Specified Time**, or **Overwriting**. Click **Save** after configuration.

#### **Delete Old Events Periodically**

Drag the block or enter number to set the period for event deleting. All events will be deleted according to the configured time duration.

### **Delete Old Events by Specified Time**

Set a time and all events will be deleted on the configured time.

### **Overwriting**

The earliest 5% events will be deleted when the system detects the stored events has been over 95% of the full space.

## **Set Password Mode**

Before configuring passwords, it is necessary to clarify whether the password is a device-set personal PIN or a platform-applied personal PIN. If it is a device-set personal PIN, it can be created or edited on the device or on the web, and cannot be set on other platforms; If it is a platform-applied personal PIN, it can be created or edited on the platform, and issued to the device before it can be used. It cannot be set on the device or on the web.

### **Steps**

1. Click **System and Maintenance** → **System Configuration** → **Security** → **PIN Mode**

#### **Device-Set Personal PIN**

It can be created or edited on the device or on the web, and cannot be set on other platforms.

#### **Platform-Applied Personal PIN**

It can be created or edited on the platform, and issued to the device before it can be used. It cannot be set on the device or on the web.

2. Click **Save**.

## **Upgrade and Maintenance**

Reboot device, restore device parameters, and upgrade device version.

### **Reboot Device**

Click **System and Maintenance** → **Maintenance** → **Host** .

Click **Restart** to reboot the device.

### **Reboot Sub Device**

Click **System and Maintenance** → **Maintenance** → **Sub-Device** .

Set the device, and click **Restart**.

### **Upgrade**

Click **System and Maintenance** → **Maintenance** → **Upgrade** .

Select an upgrade type from the drop-down list. Click  and select the upgrade file from your local PC. Click **Upgrade** to start upgrading.

If the device has been connected to Hik-Connect and network, when there is a new installation package in Hik-Connect, you can click **Upgrade** after Online Update to upgrade the device system.

---

### **Note**

Do not power off during the upgrading.

---

## Sub Device Upgrade

Click **System and Maintenance** → **Maintenance** → **Upgrade** .

Select an upgrade type from the drop-down list. Click  and select the upgrade file from your local PC and click **Next**. Click **Upgrade** to start upgrading.

## Restore Parameters

Click **System and Maintenance** → **Maintenance** → **Backup and Reset** → **Host** .

### Restore All

All parameters will be restored to the factory settings. You should activate the device before usage.

### Restore

The device will restore to the default settings, except for the device IP address and the user information.

## Restore Sub-Device Parameters

Click **System and Maintenance** → **Maintenance** → **Backup and Reset** → **Sub-Device** .

Select the device, and click **Restore to Factory Settings**.

## Import and Export Parameters

Click **System and Maintenance** → **Maintenance** → **Backup and Reset** .

### Export

Click **Export** to export the device parameters.

---

### **Note**

You can import the exported device parameters to another device.

---

### Import

Click  and select the file to import. Click **Import** to start import configuration file.

## Device Debugging

You can set device debugging parameters.

## Steps

1. Click **System and Maintenance** → **Maintenance** → **Device Debugging** .
2. You can set the following parameters.

### Enable SSH

To raise network security, disable SSH service. The configuration is only used to debug the device for the professionals. You can click **Debug** to debug SSH.

### Capture Network Packet

You can set the **Capture Packet Duration**, **Capture Packet Size**, and click **Start** to capture.

## Log Query

You can search and view the device logs.

Go to **System and Maintenance** → **Maintenance** → **Log** .

Set the major and minor type of the log type. Set the start time and end time for searching, and click **Search**.

The results will be displayed below, which including the No., time, the major type the minor type, the channel No., the local/remote user information, the remote host IP, etc.

## Test Protocol via PC Web

Select a protocol address, and enter the protocol to test. You can debug the device according to the response header and returned value.

Go to **System and Maintenance** → **Maintenance** → **Device Debugging** → **Protocol Testing**.

The screenshot displays a web interface for protocol testing. On the left, there is a form with a label '\*Enter Protocol Address' and a dropdown menu currently showing 'GET'. To the right of the dropdown is a text input field containing 'Enter./ISAPI/...'. Below these fields is a red 'Execute' button. On the right side of the interface, under the heading 'Testing Result', there are two large, empty rectangular boxes. The top box is labeled 'Response Header' and the bottom box is labeled 'Return Value'.

Figure 8-11 Protocol Testing

Select a protocol address, and enter the protocol. Click **Execute**.

Debug the device according to the response header and returned value.

### Set Network Diagnosis

Enter the device IP address or domain name, you can perform PING settings. Debug the network according to the PING result.

Go to **Maintenance and Security** → **Maintenance** → **Network Diagnosis** .

Enter the device IP for PING operation, select the network connection mode, PING duration, and Ping data package size (default parameter is recommended.) Click **Diagnose**. The result will displayed in **PING Result**.

### Set Network Penetration Service

When the device is deployed on the LAN, penetration service can be enabled to achieve remote device management.

#### Steps

1. Click **Configuration** → **Network** → **Network Service** → **Network Penetration Service** .
2. Click to **Enable Penetration Service**.
3. Enter **Server IP Address** and **Server Port**.
4. Enter login **User Name** and **Password**.
5. Set **Heartbeat Timeout**. The range is 1 to 6000.
6. Click **Save**.
7. You can view **Online Status**. Click **Refresh** to view the latest status.

### 8.7.14 Certificate Management

It helps to manage the server/client certificates and CA certificate.



The function is only supported by certain device models.

---

### Create and Import HTTPS Certificate

#### Steps

1. Go to **Maintenance and Security** → **Security** → **Certificate Management** .
2. In the **HTTPS Certificate** area, click **Create Certificate Request**.
3. Input certificate information and click **Save**.

- Click **View** and the created certificate will be displayed.
  - The certificate will be saved automatically.
4. Download the certificate and save it to an asking file in the local computer.
  5. Send the asking file to a certification authority for signature.
  6. Import the signed certificate.
    - 1) In the **Import Key** area, select a certificate from the local, and click **Import**.
    - 2) In the **Import Communication Certificate** area, select a certificate from the local, and click **Import**.

### Create and Import SYSLOG Certificate

#### Steps

1. Go to **Maintenance and Security → Security → Certificate Management** .
2. In the **SYSLOG Certificate** area, click **Create Certificate Request**.
3. Input certificate information and click **Save**.
  - Click **View** and the created certificate will be displayed.
  - The certificate will be saved automatically.
4. Download the certificate and save it to an asking file in the local computer.
5. Send the asking file to a certification authority for signature.
6. Import the signed certificate.
  - 1) In the **Import Key** area, select a certificate from the local, and click **Import**.
  - 2) In the **Import Communication Certificate** area, select a certificate from the local, and click **Import**.

### Import CA Certificate

#### Before You Start

Prepare a CA certificate in advance.

#### Steps

1. Go to **Maintenance and Security → Security → Certificate Management** .
2. Create an ID in the **CA Certificate ID** area.



#### Note

The input certificate ID cannot be the same as the existing ones.

---

3. Upload a certificate file from the local.
4. Click **Import**.

### 8.7.15 Unlock

If cards are locked, you can click the button to unlock all cards.

Click **System and Maintenance** → **Safe** → **Unlock** , and click **Unlock**.

## Chapter 9 Configure the Device via the Mobile Web

### 9.1 Login

You can login via mobile browser.

---

#### Note

- Parts of the model supports Wi-Fi settings.
  - Make sure the device is activated.
  - Make sure the device and the mobile phone are in the same Wi-Fi.
- 

Enter the device IP address in the address bar of the mobile browser and press **Enter** to enter the login page.

Enter the device user name and the password. Tap **Login**.

### 9.2 Overview

You can view the basic information, door status, real-time event, device status, network status and set person management, device management, event search, access control parameters, door parameters, etc. via shortcut entry.

Function Descriptions:

#### Door Status



The door status is open/closed/remaining open/remaining closed. You can tap to select open/closed/remaining open/remaining closed status according to your actual needs.

#### Shortcut Entry

You can set person management, device management, event search, access control parameters, door parameters, etc. via shortcut entry.

#### Network Status

You can view the connected and registered status of network.

#### Real-Time Event

You can view real-time event details.

#### Device Status

You can view device status.

## 9.3 Forget Password

If you forget the password when logging in, you can change the password by email address or security questions.

On the login page, tap **Forget Password**.

Select **Verification Mode**.

### Security Question Verification

Answer the security questions.

### E-mail Verification

1. Export the QR code and send it to ***pw\_recovery@hikvision.com*** as attachment.
2. You will receive a verification code within 5 minutes in your reserved email.
3. Enter the verification code into the verification code field to verify your identification.

Tap **Next**, create a new password and confirm it.

## 9.4 Configuration

### 9.4.1 View Device Information

View the device name, language, model, serial No., version, Mac address, local RS-485 number, alarm input number, alarm output number, device capacity, etc.

On the home page, tap  → **System Settings** → **Basic Information** .

View the device name, language, model, serial No., version, Mac address, local RS-485 number, alarm input number, alarm output number, device capacity, etc.

Tap **Save**.

### 9.4.2 Time Settings

Set the time zone, time sync. mode, and displayed time.

Tap  → **System Settings** → **Time Settings** to enter the settings page.

Tap **Save** to save the settings.

#### Time Zone

Select the time zone where the device is located from the drop-down list.

#### Time Sync. Mode

**Manual**

By default, the device time should be synchronized manually. You can set the device time manually.

### NTP

Set the NTP server's IP address, port No., and interval.

### 9.4.3 Set DST

#### Steps

1. Tap  → **System Settings** → **Time Settings** , to enter the settings page.

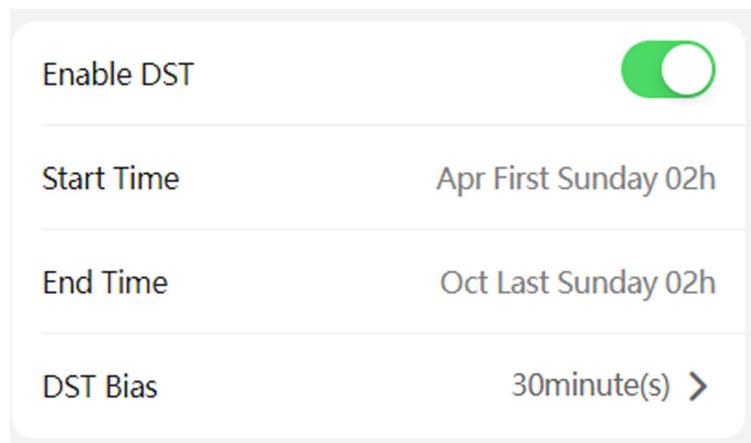


Figure 9-1 DST

2. Tap **Enable DST**.
3. Set the start time, end time, and DST bias.
4. Tap **Save**.

### 9.4.4 User Management

#### Steps

1. Tap  → **User Management** → **User Management** → **admin** to enter the setting page.
2. Enter the old password and create a new password.
3. Confirm the new password.
4. Tap **Save**.

---

#### **Note**

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using 8-16 characters, including at least two kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password

regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

---

### 9.4.5 Network Settings

#### Wired Network

Set wired network.

Tap  → **Network Settings** → **TCP/IP** to enter the configuration page.

##### DHCP

If you disable the function, you should set the IPv4 address, IPv4 subnet mask, IPv4 default gateway, IPv6 mode, IPv6 address, IPv6 subnet prefix length, IPv6 default gateway, Mac address, and MTU, Mac address, MTU.

If you enable the function, the system will allocate the IPv4 address, IPv4 subnet mask, the IPv4 default gateway, IPv6 mode, IPv6 address, IPv6 subnet prefix length, and IPv6 default gateway automatically.

##### DNS Server

Set the preferred DNS server and the Alternate DNS server according to your actual need.

#### Set Wi-Fi Parameters

Set the Wi-Fi parameters for device wireless connection.

##### Steps

---

##### **Note**

The function should be supported by the device.

---

1. Tap  → **Network Settings** → **Wi-Fi** to enter the settings page.
2. Enable **Wi-Fi**.

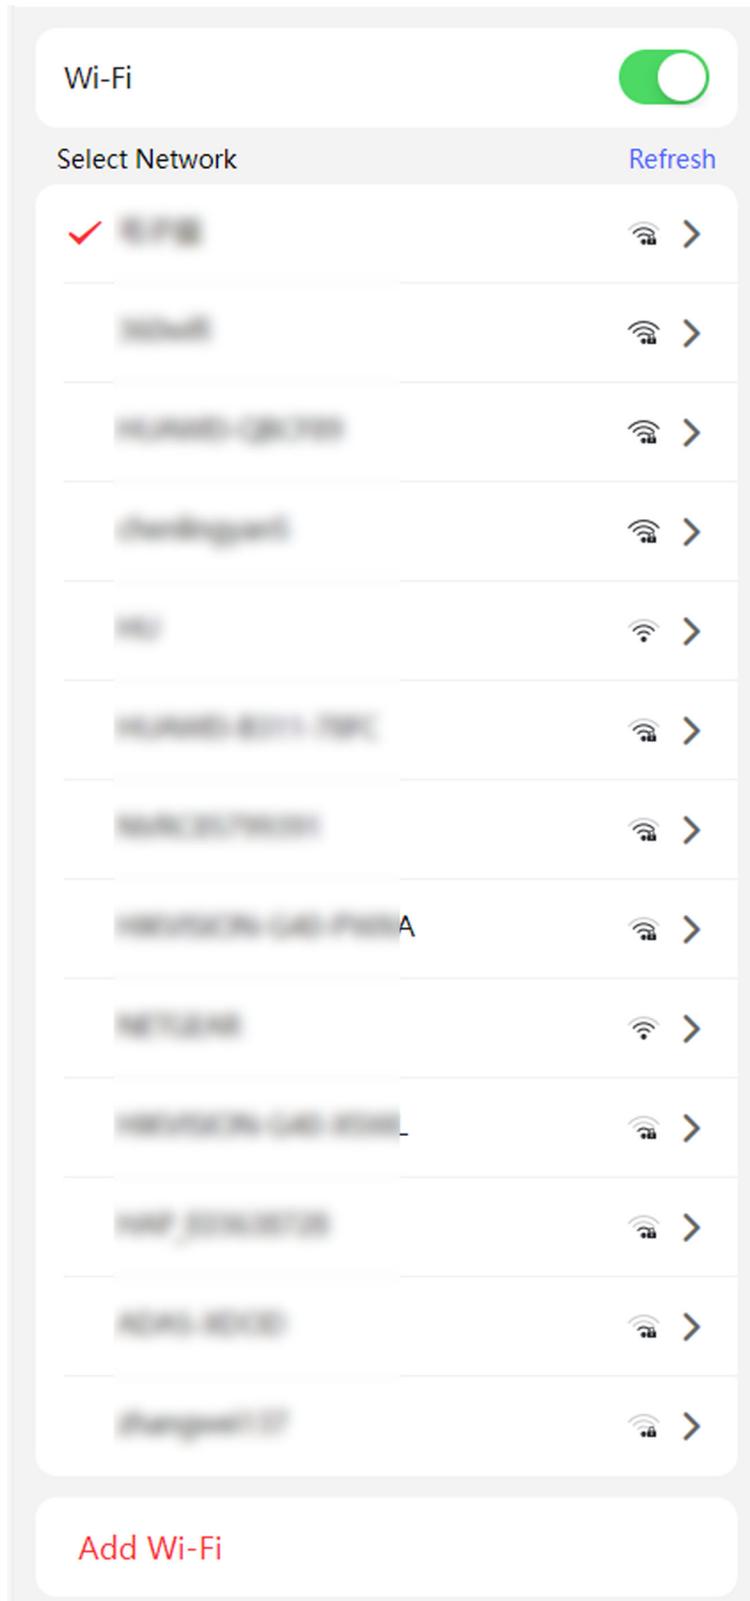


Figure 9-2 Wi-Fi

3. Add Wi-Fi.
  - 1) Tap **Add Wi-Fi**.
  - 2) Enter **Wi-Fi Name** and **Wi-Fi Password**, and select **Encryption Type**.
  - 3) Tap **Save**.
4. Select the Wi-Fi name, and tap **Connect**.
5. Enter the password and tap **Save**.

### Set Device Hotspot

Set the device hotspot, and mobile phone can connect to the device to enter the mobile browser.

#### Steps

1. Tap  → **Network Settings** → **Device Hotspot** .
2. You can enable device hotspot and view the hotspot name.



By default, the hotspot name is the AP\_Device Serial No.

---

3. Tap **Save**.

### Set Port Parameters

You can set the HTTP, HTTPS and Websocket(s) according to actual needs when accessing the device via network.

Tap  → **Network Service** → **HTTP(S)** , to enter the settings page.

#### HTTP

It refers to the port through which the browser accesses the device. For example, when the HTTP Port is modified to 81, you need to enter ***http://192.0.0.65:81*** in the browser for login.

#### HTTPS

Set the HTTPS for accessing the browser. Certificate is required when accessing.

Tap  → **Network Service** → **Websocket(s)** , to enter the settings page.

You can view the Websocket(s) port No.

### Platform Access

Platform access provides you an option to manage the devices via platform.

#### Steps

1. Tap  → **Device Access** → **Hik-Connect** to enter the settings page.

---

## Note

Hik-Connect is an application for mobile devices. With the App, you can view live image of the device, receive alarm notification and so on.

2. Check **Enable** to enable the function.
3. You can enable **Custom** to enter the server address.

---

## Note

- 6 to 12 letters (a to z, A to Z) or numbers (0 to 9), case sensitive. You are recommended to use a combination of no less than 8 letters or numbers.
- The verification code cannot be **123456** or **abcdef** (case non-sensitive0).

4. You can view **Network Connection Status** and **Binding Status**.
5. You can set **Network Connection Priority**.
6. Tap **Save** to enable the settings.

## Set ISUP Parameters

Set the ISUP parameters for accessing device via ISUP protocol.

### Steps

---

## Note

The function should be supported by the device.

1. Tap  → **Device Access** → **ISUP** to enter the settings page.
2. Enable **ISUP**.
3. Set the ISUP version, server Address, port, device ID and encryption key.

---

## Note

If you select 5.0 as the version, you should set the encryption key as well.

4. You can view **Registration Status**.
5. You can set **Network Connection Priority**.
6. Set the ISUP listening parameters, including ISUP alarm center IP address/domain name, ISUP alarm center URL, and ISUP alarm center port.
7. Tap **Save** to save the settings.

## Set Network Penetration Service

When the device is deployed in the LAN, you can enable the penetration service to realize device remote management.

### Steps

1. Tap  → **Device Access** → **Network Penetration Service** to enter the settings page.

2. Tap **Enable Penetration Service**.
3. Set **Server IP Address** and **Server Port**. Create **User Name** and **Password**.
4. **Optional**: You can set **Heartbeat Timeout**. The value range is 1 to 6000.
5. **Optional**: You can view the status of the penetration service. Click **Refresh** to refresh the status.
6. Tap **Save**.



The penetration service will auto disabled after 48 h.

---

### 9.4.6 Alarm Settings

#### Alarm Input Settings

Set the device's alarm input parameters.

Tap  → **Alarm Settings** → **Alarm Input** .

Select the device, set alarm name. Click **Save**.

#### Alarm Output Settings

Set the device's alarm output parameters.

Tap  → **Alarm Settings** → **Alarm Output** .

Select the device. Select a alarm output device No. Create a name for the alarm output device and set the alarm duration. Tap **Save**.

#### Continuous Alarm

The alarm output device will continuously in the alarm status.

#### Custom Alarm Duration

You should set the custom duration. The alarm output device will be in the alarm status for the configured time duration.



Range: from 1 to 5999s.

---

### 9.4.7 Access Configuration

#### Set Wiegand Parameters

You can set the Wiegand transmission direction.

## Steps

---

### Note

Some device models do not support this function. Refer to the actual products when configuration.

---

1. Tap  → **Access Configuration** → **Wiegand Settings** .
2. Select a access point from the list.
3. Set Wiegand parameters.

#### **No.**

Select Wiegand No. for parameters settings.

#### **Wiegand**

Select to enable the card reader's Wiegand function.

#### **Wiegand Direction**

By default, the direction is **Input**.

#### **Wiegand Mode**

Select the Wiegand mode and the card reader can communicate with the controller by Wiegand 26/34 or other protocol.

Click **Auto Recognize**, enter card No. to recognize the Wiegand mode. Enter the Card No., and click **Start to Recognize**. Present the card on the related card reader. The system will show the Wiegand mode. Click **OK**.

If select **Custom**, you should set custom Wiegand parameters. Click **Custom Wiegand Settings**, and set the name, parity type, total length and Wiegand rule. Click **OK**.

#### **Wiegand Mapping Card Reader**

Select the Wiegand card reader related door and card reader direction.

4. Tap **Save** to save the settings.
- 

### Note

If you change the peripheral, and after you save the device parameters, the device will reboot automatically.

---

## Door Magnetic Contact Settings

Set the opening and closing door status of the door magnetic contact to match the actual wiring method.

### **Before You Start**

The access controller has connected to the door magnetic contact.

### Steps

1. Tap  → **Access Configuration** → **Host Parameter** . to enter the settings page.
  2. Select the door magnetic contact status.
-

### Barrier Open Status (Default)

The door magnetic contact is in open status in default. Access controller is connected to the door magnet contact through NO.

### Door Closed Status

The door magnetic contact is in closed status in default. Access controller is connected to the door magnet contact through NC.

## 9.4.8 Organization And Person Management

You can add, edit, delete, and search organization and person via mobile Web browser.

### Steps

1. Tap  → **Person Management** to enter the settings page.
2. Add organization.
  - 1) Tap **Add**, and then tap **Add Organization**.
  - 2) Enter **Organization Name**.
  - 3) Select **Upper-Level Organization**.
  - 4) Tap **Save**.
3. Add user.
  - 1) Tap **Add**, and then tap **Add Person**.
  - 2) Set the following parameters.

#### Employee ID

Enter the employee ID. The Employee ID cannot be 0 or exceed 32 characters. It can be a combination of uppercase, lowercase letters and numbers.

#### Name

Enter your name. The name supports numbers, uppercase and lowercase English, and characters. The name is recommended to be within 32 characters.

#### User Type

Select user type.

#### Organization

Select organization.

#### Permission Type/Permission Group

##### Permission Type

##### By Permission Group

Click **Allocate** and select an added access permission. The person will contain the checked access permission. If you have not added the access permission in advance, you can click **Add Access Permission** to add. For details, see [Permission Management](#) . Click **OK**.

### By Access Point

Click **Allocate** and select the access schedule. Click **Add** to add the access points. The person will contain the permissions of the access point within the access schedule. Click **OK**.

### Fingerprint

Add fingerprint. Tap **Fingerprint**, then tap **+**, and add fingerprint via the fingerprint module.

### Card

Add card. Tap **Card**, then tap **+**, enter the card No. and select card type.

### PIN

Edit or view PIN.



### Note

Before configuring PIN, it is necessary to clarify whether the PIN is a device-set personal PIN or a platform-applied personal PIN. If it is a device-set personal PIN, it can be created or edited on the device or on the web, and cannot be set on other platforms; If it is a platform-applied personal PIN, it can be created or edited on the platform, and issued to the device before it can be used. It cannot be set on the device or on the web.

---

3) Tap **Save**.

4. Tap **More**.

1) Select **Gender**.

2) Set the following parameters.

#### Long-Term Effective User

Set the user permission as long-term effective.

#### Date of Issue/Date of Expiry

Set **Date of Issue** and **Date of Expiry** of person permission.

#### Extended Open

After Extended Door Opening is enabled, the close time needs to be configured in Door Parameters.

#### Authentication Type

Select authentication type.

5. Tap **Save**.

## 9.4.9 Device Management

### Auto Search Device

The system can automatically search for not added modules that have been connected to the access controller.

Tap  → **Device Management** → **Add** → **Auto Search Device** . The searched not added modules will be displayed in the list of the page.

### Add Access Module

Add access module manually.

#### Steps

1. Tap  → **Device Management** → **Add** → **Add Access Module** to enter the settings page.
2. Select the dial address of the access module, and set the DIP switch of the access module to be consistent with the one shown in the picture. Set **Device Name**. Tap **Next**.

---

#### **Note**

After adding or modifying the dialing address of the access module, you need to reboot the access module to take it effect.

---

3. Select door and set the door parameters, and tap **Next**.

#### Select Door of Access Module

According to the door actually controlled by the access module, select door.

#### Door Name

Create the door name associated with the access module.

#### Area

Choose the area from the drop-down list. If you have not created an associated area in advance, click **Add Area** to create.

#### Open Duration

Set the action time after the associated door is unlocked. If the door is not opened within the set time, the door will lock automatically. The range can be set from 1 to 255 s.

#### Door Magnetic Sensor Type

You can set Door Magnetic Sensor Type as **Remain Open** or **Remain Closed** according to your actual needs. By default, it is **Remain Closed**.

#### Exit Button Type

Under normal circumstances, it is Remain Open (except for special needs).

#### Extended Open Duration

For the elderly or children with reduced mobility, by set Extended Open Duration, the door magnetic sensor opening time after swiping card can be appropriately delayed.

4. Select the access point, set the card reader parameters associated with the module, and tap **Next**.

#### Select Access Point

According to the door actually controlled by the access module, select access point.

#### Select Card Reader

Select Enter or Exit according to the actual card reader location.

### Card Reader Name

Create the card reader name.

### Card Reader Description

View the card reader description. Read Only

### QR Code

If the card reader supports the QR code authentication function, this function can be enabled, then on the card reader, it can be carried out through the QR code authentication.

### Enable Bluetooth

If the card reader supports the Open Door via Bluetooth function, this function can be enabled, then on the card reader, the door can be opened via bluetooth.

## 5. Set alarm input and output parameters.

### Alarm Input

Select the alarm input No. and set the name.

### Alarm Output

Select the alarm output No. and set the name. You can set **Alarm Duration**.

### Continuous Alarm

The alarm output device will continuously in the alarm status.

### Custom Alarm Duration

You should set the custom duration. The alarm output device will be in the alarm status for the configured time duration.



Range: from 1 to 5999s.

---

## 6. Tap **Save**.

## Add I/O Module

Add I/O module manually.

### Steps

1. Tap  → **Device Management** → **Add** → **Add I/O Module** to enter the settings page.
2. Select the dial address of the module, and set the DIP switch of the module to be consistent with the one shown in the picture. Set **Device Name**. Tap **Next**.



After adding or modifying the dialing address of the module, you need to reboot the module to take it effect.

---

## 3. Set alarm input and output parameters.

### Alarm Input

Select the alarm input No. and set the name.

### Alarm Output

Select the alarm output No. and set the name. You can set **Alarm Duration**.

#### Continuous Alarm

The alarm output device will continuously in the alarm status.

#### Custom Alarm Duration

You should set the custom duration. The alarm output device will be in the alarm status for the configured time duration.



Range: from 1 to 5999 s.

---

4. Tap **Save**.

## 9.4.10 Access Control Settings

### Set Door Parameters

Tap  → **Access Control** → **Door Parameters** .

Select the corresponding door and edit the door parameters. Tap **Save** to save the settings after the configuration. You can tap **Save and Sync. to All**.

#### Door Name

You can create a name for the door.

#### Area

Select the area.

#### Open Duration

Set the door unlocking duration. If the door is not opened for the set time, the door will be locked.

#### Door Opening Timeout Alarm Threshold

Set the Door Opening Timeout Alarm Threshold, an alarm will be triggered if the door has not been closed within the configured time duration.

#### Exit Button Type

You can set the exit button as **Remain Open** or **Remain Closed** according to your actual needs. By default, it is **Remain Open**.

#### Door Remain Open Duration with First Person (min)

Set the door open duration when first person is in. After the first person is authorized, it allows multiple persons access the door or other authentication actions.

## Super Password

The specific person can open the door by inputting the super password.

---



The duress code and the super code should be different. And the digit ranges from 4 to 8.

---

## Set Authentication Parameters

Set Authentication Parameters.

### Steps

1. Tap  → **Access Control** → **Authentication Settings** .
2. Select the corresponding card reader and edit the authentication parameters.

### Card Reader

Select card reader for settings.

### Card Reader Type/Card Reader Description

Get card reader description. They are read-only.

### Authentication

Select an authentication mode according to your actual needs from the drop-down list.

### Authentication Interval

You can set the authentication interval of the same person when authenticating. The same person can only authenticate once in the configured interval. A second authentication will be failed.

### Alarm of Max. Failed Attempts

Enable to report alarm when the card reading attempts reach the set value.

### Lock When Card Swiping Attempts Exceed Limit/Max. Failed Attempts

Enable to report alarm when the card reading attempts reach the set max. failed attempts.

### QR Code

Enable the function and the card reader can recognize the QR code for authentication.

---



The function should be supported by the card reader.

---

### Enable Bluetooth

Enable the bluetooth function and the you can use the bluetooth function (e.g. opening door) on the card reader.

### Device Name/Transmitting Power

Edit the card reader's name and its transmitting power.

### Open Door via Bluetooth

Enable the function and you can open the door via bluetooth through App. You should add the device to the App before use the function.

### Advanced Settings

#### Enable Authentication Device

Enable the authentication function.

#### Communication with Controller Every

When the access control device cannot connect with the card reader for longer than the set time, the card reader will turn offline automatically.

#### Max. Interval When Entering Password

When you entering the password on the card reader, if the interval between pressing two digits is longer than the set value, the digits you pressed before will be cleared automatically.

#### Enable Tampering Detection

Enable the anti-tamper detection for the card reader.

#### OK LED Polarity/Error LED Polarity/Buzzer Polarity

Set OK LED Polarity/Error LED Polarity/Buzzer Polarity of the access control device according to the card reader parameters. Generally, adopts the default settings.

3. Tap **Save**. You can tap **Save and Sync. to All**.

### Smart Settings

Set smart parameters.

#### Fingerprint Parameters

Tap  → **Smart** → **Fingerprint Parameters** .

#### Fingerprint Recognition

Enable **Fingerprint Recognition**.

#### Fingerprint Security Level

You can set the security level of fingerprint. The higher the security level you set, the lower the False Acceptance Rate (FAR) will be. The higher the security level you set, the lower the False Rejection Rate (FRR) will be.

#### Set Privacy Parameters

Set the storage parameters.

Tap  → **Access Control** → **Privacy Settings** .

## Event Storage Settings

### Delete Old Events Periodically

Enter number to set the period for event deleting. All events will be deleted according to the configured time duration.

### Delete Old Events by Specified Time

Set a time and all events will be deleted on the configured time.

### Overwriting

The earliest 5% events will be deleted when the system detects the stored events has been over 95% of the full space.

## Password Mode

Before configuring passwords, it is necessary to clarify whether the password is a device-set personal PIN or a platform-applied personal PIN. If it is a device-set personal PIN, it can be created or edited on the device or on the web, and cannot be set on other platforms; If it is a platform-applied personal PIN, it can be created or edited on the platform, and issued to the device before it can be used. It cannot be set on the device or on the web.

### Steps

1. Tap  → **Access Control** → **Privacy Settings** → **PIN Mode**

#### Device-Set Personal PIN

It can be created or edited on the device or on the web, and cannot be set on other platforms.

#### Platform-Applied Personal PIN

It can be created or edited on the platform, and issued to the device before it can be used. It cannot be set on the device or on the web.

2. Tap **Save**.

## Set Card Security

Tap  → **Access Control** → **Card Settings** to enter the configuration page.

Set the parameters and tap **Save**.

### Enable NFC Card

In order to prevent the mobile phone from getting the data of the access control, you can enable NFC card to increase the security level of the data.

### Enable NFC Security Encryption

After enabling, the card reader can only recognize the NFC credential generated from the Hik-Connect.

## Enable M1 Card

Enable M1 card and authenticating by presenting M1 card is available.

## M1 Card Encryption

M1 card encryption can improve the security level of authentication.

## Sector

Enable the function and set the encryption sector. By default, Sector 13 is encrypted. It is recommended to encrypt sector 13.

## Enable EM Card

Enable EM card and authenticating by presenting EM card is available.



### Note

EM card is supported when the device connects a peripheral card reader that supports presenting EM card.

---

## Enable DESFire Card

The device can read the data from DESFire card when enabling the DESFire card function.

## Enable FeliCa Card

The device can read the data from FeliCa card when enabling the FeliCa card function.

## Card Authentication Mode

Select card authentication mode.

## Enable Reversed Card No.

The read card No. will be in reverse sequence after enabling the function.

## 9.4.11 Event Search

Tap  → **Event Search** to enter the Search page.

Enter the search conditions, and tap **Search**.



### Note

Support searching for names within 32 digits.

---

## 9.4.12 Upgrade and Maintenance

Restart device, restore device parameters, and upgrade device version.

## View Handling Advice

Tap  → **Maintenance** → **Restart** .

You can view item exception records, and view handling advice.

## Restart Device

Tap  → **Maintenance** → **Restart** .  
Tap **Restart** to restart the device.

## Upgrade

Tap  → **Maintenance** → **Upgrade** .  
Tap **Upgrade** to upgrade the device.



### Note

Do not power off during the upgrading.

---

## Restore Parameters

Tap  → **Maintenance** → **Default** .

### Restore

The device will restore to the default settings, except for the device IP address and the user information.

### Restore All

All parameters will be restored to the factory settings. You should activate the device before usage.

## Device Debugging

Tap  → **Maintenance** → **Device Debugging** .  
You can enable **SSH** for device debugging.

## View Log

Tap  → **Maintenance** → **Log** .  
Set log type and time, and tap **Search** to search logs.

## 9.4.13 View User Manual

Tap  → **View User Manual** . You can scan the QR code with your mobile phone for details.

## 9.4.14 View Open Source Software License

Tap  → **Open Source Software Statement** , you can view the Open Source Software Statement.

## Chapter 10 Other Platforms to Configure

You can also configure the device via HikCentral Access Control. For details, see the platforms' user manual.


### **HikCentral Access Control (HCAC)**

Click/tap the link to view the HCAC's user manual.


<http://enpinfodata.hikvision.com/analysisQR/showQR/f2f6cf42>

## Appendix A. Dimension


Dimension of 1-Door/2-Door/4-Door Access Controller

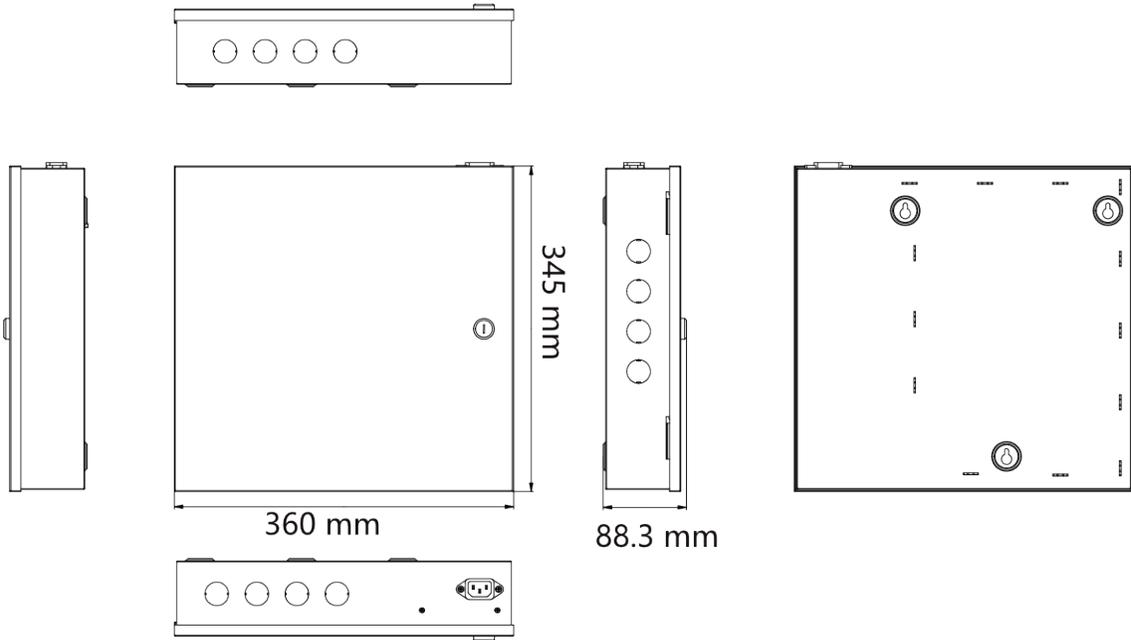

Dimension of 8-Door Access Controller

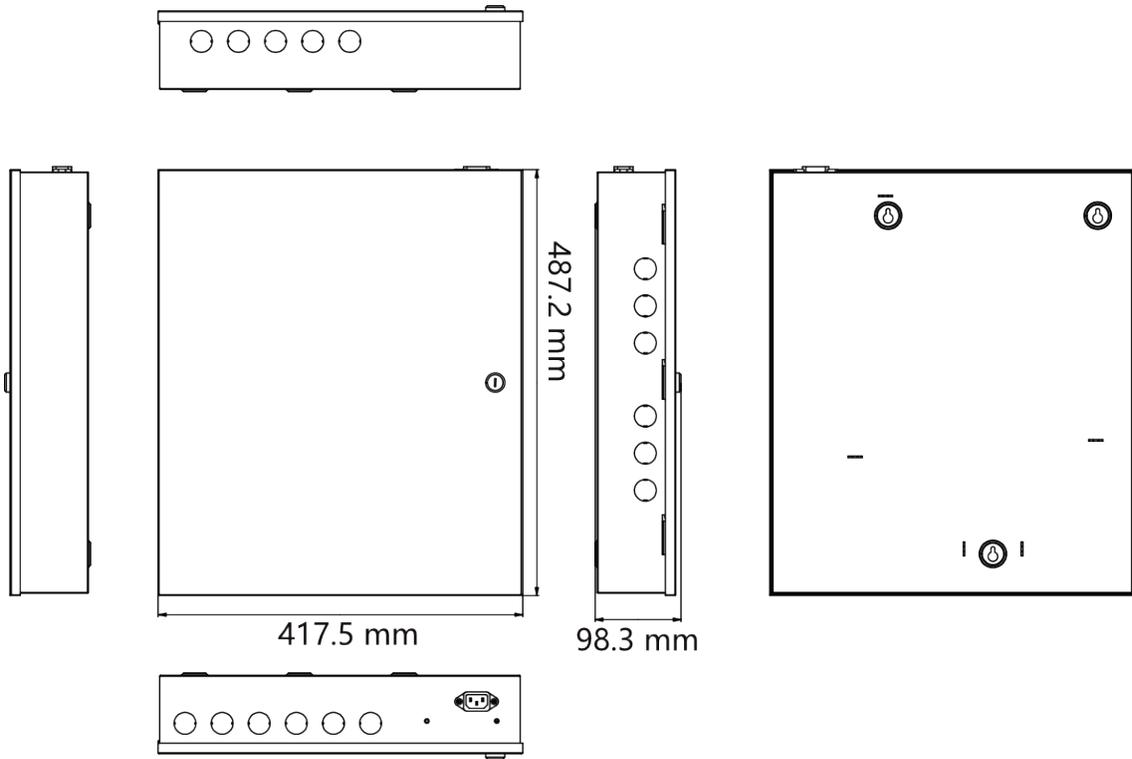

Dimension of Access Controller Main Board

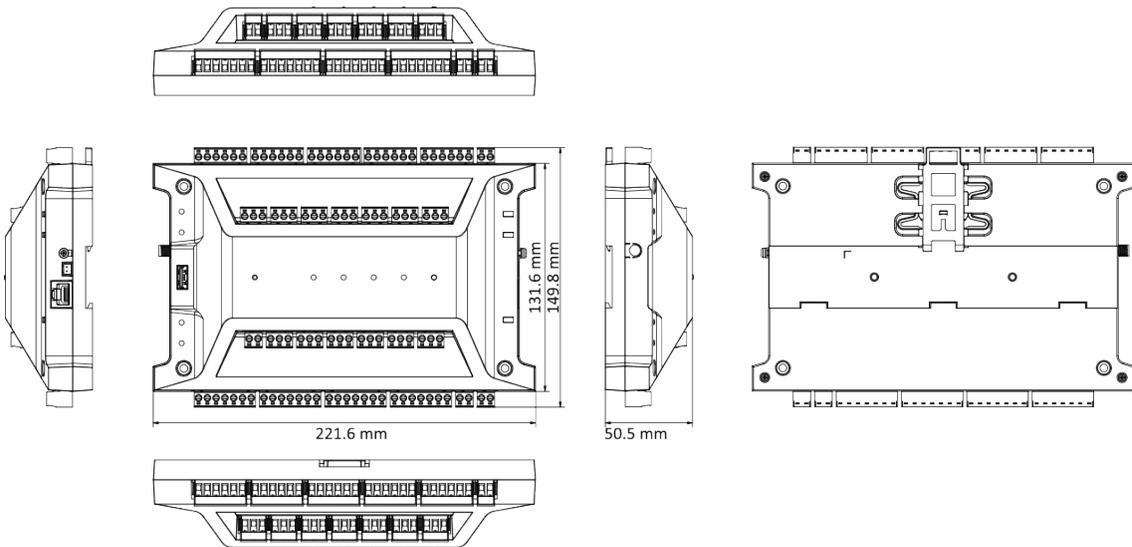



See Far, Go Further